

H40, H50
 Rotary Screw
 Air Compressor
 Units
 - - -
 Installation
 And
 Start-up Data

Contents:	Page:
Quick Start	2
Safety Precautions	6
Unpacking and Inspection	7
Installation – Mechanical	8
Lubrication	11
Installation – Electrical	12
AC Motor Maintenance Instructions	15
Start-up Procedures	16
Preventative Maintenance Schedule	17
Common Compressor Faults	19
Variable Speed Drive	20
Air Filtration & Refrigerated Air Dryer	23
Trouble-Shooting Guide	26
Warranty	29



Please read this manual before installing or using your Air Compressor Unit. It contains valuable information that will help in the receiving, installation, use, and maintenance of the Unit.

Please keep this manual in a safe place for future reference.

All of the information, policies, and procedures in this reference manual apply exclusively to DV Systems.

If you require assistance, please contact your local DV Systems Distributor or Authorized Service center. You may contact the manufacturer directly as follows:


Phone:	(705) 728-5657 (Canada) (704) 799-0046 (USA)	Web:	www.dvcompressors.com
Fax:	(705) 728-4974 (Canada) (704) 799-0355 (USA)	Email:	sales@dvcompressors.com (Canada) orders@dvcompressors.com (USA)

Quick Start

Mechanical Installation.

(Refer to Page 8 to 10)

- The Unit should be located in a dry, clean, cool, dust free, and well ventilated area.
- Allow a minimum of:
 - 48" (1220mm) in front of and behind the Unit.
 - 48" (1220mm) on either side of the Unit, and
 - 60" (1524mm) above Unit.
- The ambient temperature should be between 10°C and 40°C (50°F and 104°F).
- Ensure that the floor under the Unit is smooth, level and capable of bearing the weight of the Compressor.
- If installed in a compressor room, ensure that the room is adequately ventilated.

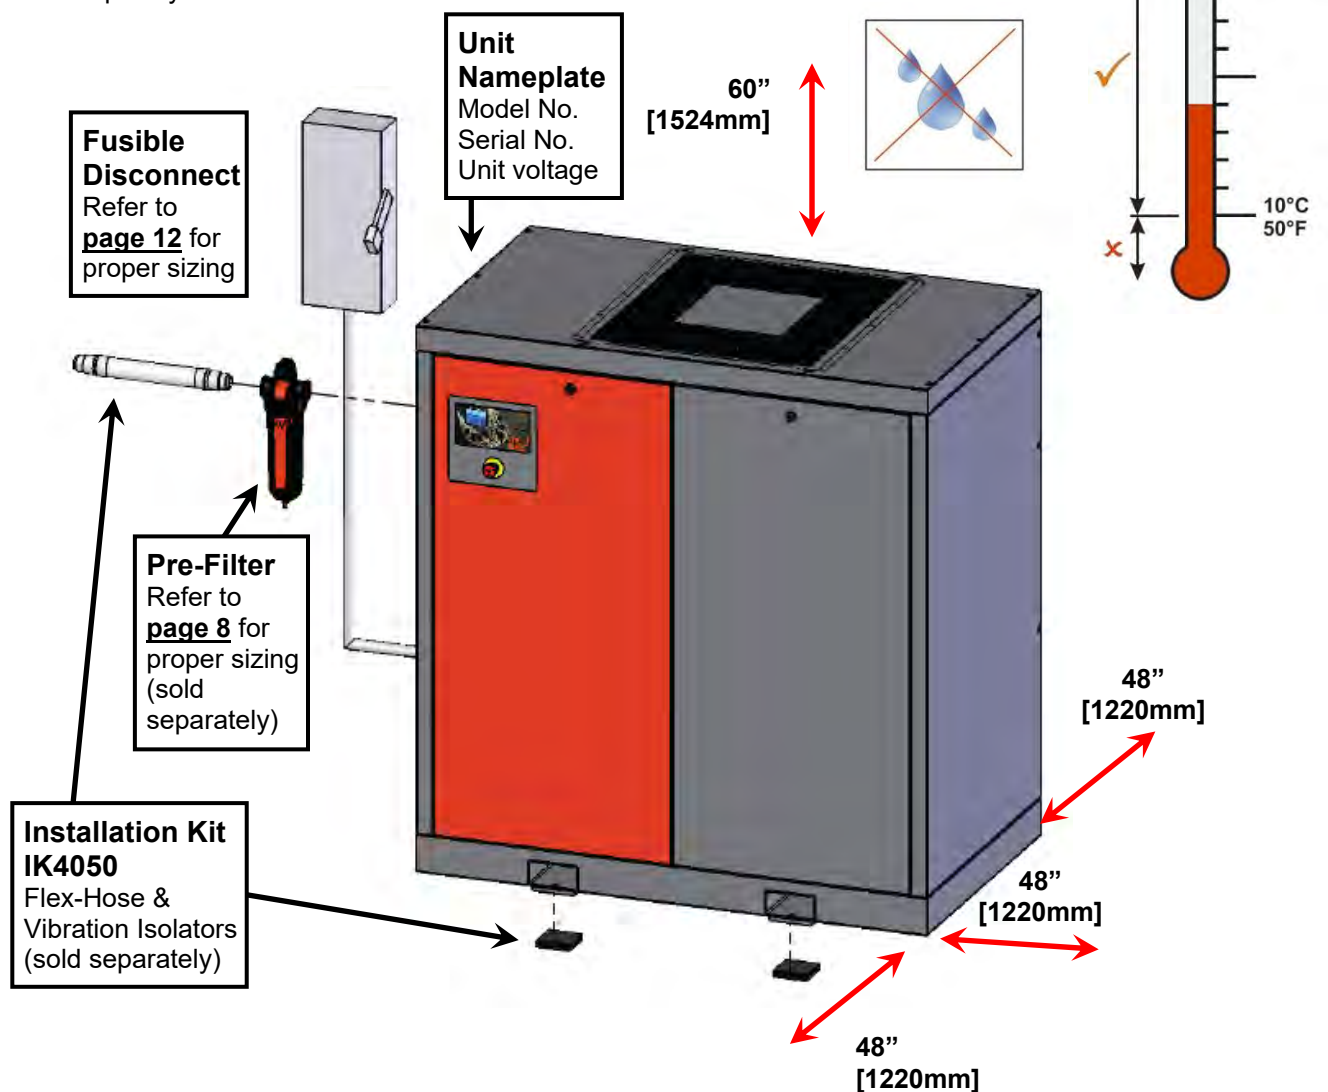

Quick Start (cont'd)

Shipping Cleats.


Your DV Systems 'H Series' Rotary Screw Compressor is shipped with several Shipping Cleats that must be removed prior to the initial start-up.

The Cleats are located a) (1) under the Air End Mount and b) (1) under the Motor of the Unit. Please remove these after locating the Unit but prior to running. Motor and Air End are orientated differently in VSD and Belt Drive Units, Cleats can be located as shown below.


Air End Cleat Removal.

- Locate the Air End Mount at the back of the Unit.
- Locate the orange Shipping Cleat under the Air End Mount.
- Remove the Bolt and Washers from the Cleat, and slide the Cleat out.

H50 VSD

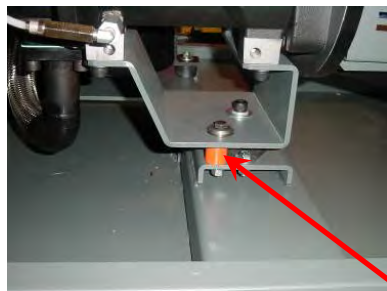

H40/50 BD

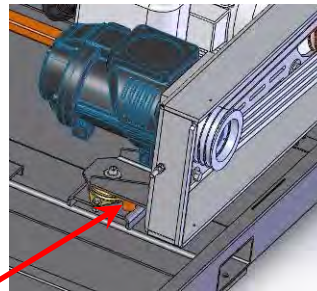


(1) Cleat at
Air End

Motor Cleat Removal.

The Motor is fastened to the Unit framework by means of (1) Shipping Cleat as indicated below. Access to the Cleat is by means of both the front and rear of the Unit.

Remove the fasteners and slide the Cleat out of the assembly.

Motor Cleat from the Front of Unit.

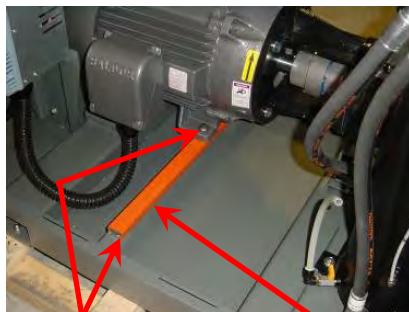

Fasteners

Shipping Cleat

Motor Cleat from the Rear of Unit.



Fasteners

Shipping Cleat

Quick Start (cont'd)

Lubrication.


(Refer to Page 11)

- Ensure the oil level in the Air End is to the level as shown while at rest.
- Check the oil after the Unit has been at rest for a minimum of 5 minutes.

External Oil Level Indicator showing proper oil level when Unit is off



Correct Oil Level

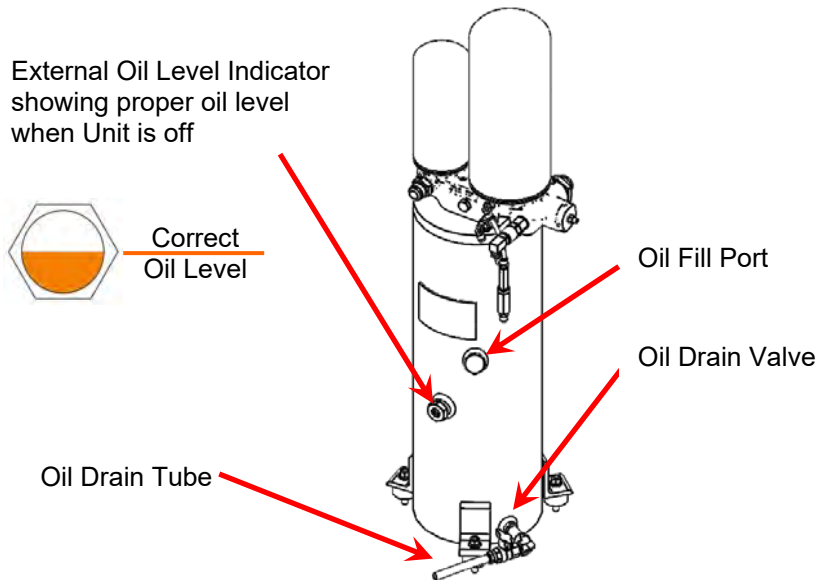

Rotation.

(Refer to Page 13)

Fixed Speed Units:


- Units are equipped with Advanced Phase Detection feature which prevents Units from rotating in the reversed direction.
- An 'E:0090 Phase Sequence' Error will appear on the Controller Screen if the phase sequence is incorrect. If this occurs, simply switch the incoming leads 'L1' and 'L3' at the Control Panel

Note: Units with serial number 077771 and earlier may be equipped with Anti-Rotation Switches.


'E:0902 Anti Rotation' will appear on the Controller Screen if the rotation is incorrect. If this occurs, change 'L1' and 'L3' to the Control Panel.

Variable Speed Units:

- The Inverter to the Motor is pre-wired at the factory.
- Remove the Cover Plate from the Coupling area and pay close attention to the arrow indicating the correct rotation.
- To verify the correct rotation, start the Unit and turn off immediately using the Emergency Stop Button.
- If the rotation is not correct, simply change two of the power leads to the Unit.

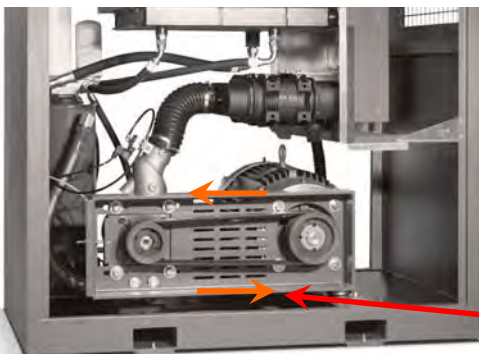

Picture from Rear of Unit

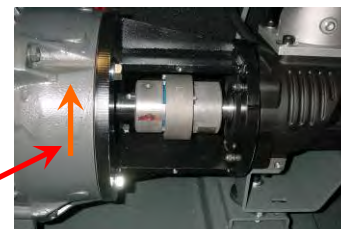

Picture from Front of Unit

Arrows Indicate Correct Rotation

Quick Start (cont'd)

Unit Operation.


Shown below is the 'CSC300' Controller which regulates the operation of the Unit. It is used to start and stop the Unit, and it provides information as to system pressure, temperature, etc.

Starting the Unit: Press the '**Start**' Button.


Stopping the Unit: Press the '**Stop**' Button

Note:

1. Do not stop the Unit using the 'Emergency Stop' Button unless there is a danger to the product or of personnel injury.
2. Do not stop the Unit by use of a disconnect or breaker.

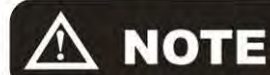

Using the Emergency Stop Button, disconnect, or breaker to stop the Unit will not allow the Unit to go through an unloading sequence, and could result in damage to the Motor, Starter, or other electrical components. Damage caused in this manner is not covered by the manufacturers Warranty.

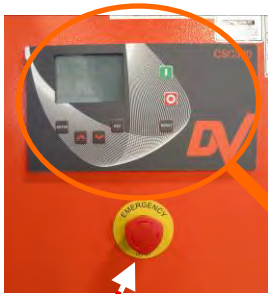

Emergency Stop.
Will quickly shut the Unit off. Is only to be used in an emergency.



Start.
Starts the Unit.


Stop.
Causes the Unit to enter 'Idle' mode and then shut off.

Digital Readout.
Indicates Unit pressure, temperature, etc.


Enter, Up, Down & Escape.
Used in the programming and changing of operating parameters of the Unit.

Safety Precautions

In order to operate the Compressor Unit safely and correctly, we have opted to use the following symbols to make you aware of important points. These points relate to user safety and preventing equipment problems. Please pay close attention to these sections.

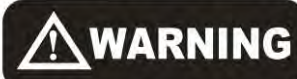

Important safety information.
A hazard that may cause serious injury or loss of life.

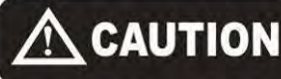







Important information that indicates how to prevent damage to equipment, or how to avoid a situation that may cause minor injury.



Information that you should pay special attention to.



The following hazards may occur during the normal use of the equipment. Please read the following chart.

Area:	Hazard:	Safeguards:
What to look for:	What may occur if precautions are not observed.	How to avoid the hazard.
	Tampering with the Unit while under full or partial pressure may cause an explosion.	Relieve all pressure from the Unit before attempting any repair or maintenance work.
	As the Unit starts and stops automatically, serious injury may result from working on the Unit with the power still in the on position.	Shut off all power to the Unit before attempting any repair or maintenance work.
	As the Unit starts and stops automatically, do not come into contact with moving parts.	Shut off all power to the Unit before attempting any repair or maintenance work.
	Air compressed by the Unit is not suitable for inhaling. It may contain vapours harmful to your health.	Never directly inhale compressed air produced by the Compressor.
	The Compressor Pump, Motor, and Tubing become hot when running. Touching these areas may cause severe burns.	Never touch the Pump, Motor, or Tubing during or immediately after operation.
	As the electrical components on the Unit are General Purpose, there is a potential for explosion should vapours be present in the area.	The Compressor must be a minimum of 20 feet (6.1 meters) from any source of potentially explosive vapours.

Unpacking and Inspection

NOTE

Each DV Systems Air Compressor is carefully tested and inspected before shipment. Though every attempt is made to ensure the safe and complete shipment of our product, freight damage or misplacement of goods may occur.

Shipments of DV Systems products are the property of the Consignee when the products leave our facility. DV Systems Inc. is not responsible for any damages or shortages caused to the product after it has left our shipping dock.

It is the responsibility of the receiver of the goods, either the Distributor or Customer, to ensure that the product has been shipped in full, and has arrived in suitable condition. Damage to the product may not be visible at time of off-loading, but may only become apparent upon unpacking or start-up.

Some areas to initially check are as follows:

- a) Check for damage to the crating and/or packaging.
- b) Check the exterior of the Cabinet for damage, either cosmetic or mechanical.
- c) If there is mechanical damage, open the Cabinet to determine whether there is any internal damage to the Unit.

Should there be damage to the product or shortages in shipment:

- 1) Stop any further unpacking or operation of the product.
- 2) Make note of the problem on the Freight Bill, should it concern a shortage or visible damage to the product.
- 3) Should the damage be noticed only after the product has been received, contact the transport company immediately to file a claim.
Depending on the problem, it may be wise to photograph the damage. Also, it may be wise to discuss with the carrier representative the time allotted to give notice of loss or damage to the product; there may be guidelines which limit timeframes of same.
- 4) Do not attempt further unpacking or operation of the product. Also, do not discard any packing material used.
- 5) A Loss or Damage Claim must be submitted to the carrier and supported by the following documents:
 - Copy of Freight Bill of Lading
 - Copy of the Invoice and Estimate to repair, in case of damage
 - Damage Report
 - Copy of photos, if applicable


Installation – Mechanical

The Importance of a Proper Installation

As with all Air Compressors, a proper installation is key to both a) long Compressor life and b) quality compressed air. A Compressor Unit not installed correctly, and coupled with a poor maintenance program, can be plagued with costly issues not covered by the manufacturer's warranty.

The drawing below indicates the components required for a good installation.

As the 'H40' and H50" Screw Units do not include an Air Receiver, one must be located as shown. And though additional filtration and a Refrigerated Dryer is shown, they may not be required in all instances, this is dependent on the quality of compressed air required.

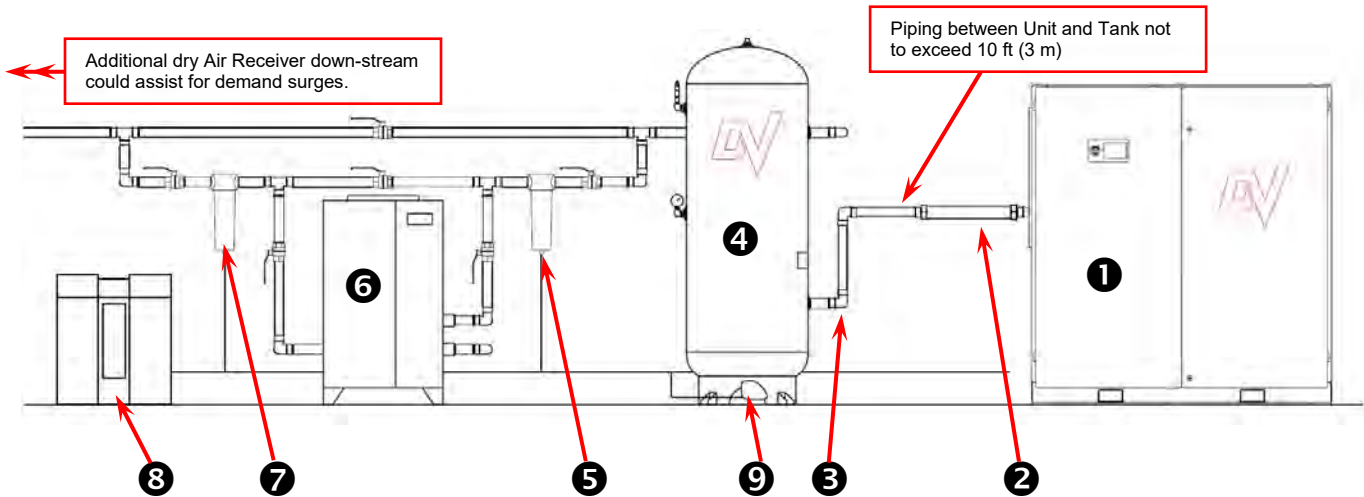

No.:	Part Number:	Description:	Notes:
1	H40 / H50	40 / 50 HP Compressor Unit	
2	H-9038	1-1/4" x 16" (407mm L) Long Flex	
3	Advanced Air Pipe Systems	1-1/4" Diameter Pipe	Contact Distributor for sizing
4	TA-9008-2	Air Receiver, 240 Gallon, 200 psi	Safety Valve sized to application
5	DF294C & DF294A	Canister & 1 Micron Element	
6	ASD200	Refrigerated Air Dryer	
7	DF294C & DF294	Canister & 0.01 Micron Element	
8	ECOTRONxx	Oil Water Separator	Use '50' for 40HP, '90' for 50HP
9	KK-9860	Zero-Loss Autodrain	

Plant piping from the system as shown above should be sized based on the Unit CFM and the length of the piping as follows. Using smaller piping will greatly restrict air flow and cause issues downstream of the Unit.

CFM @ psi:	HP	50 Feet	75 Feet	100 Feet	150 Feet	200 Feet	250 Feet	300 Feet
150 @ 145	40	1-1/4"	1-1/4"	1-1/4"	1-1/2"	1-1/2"	1-1/2"	1-1/2"
165 @ 110		1-1/2"	1-1/2"	1-1/2"	2"	2"	2"	2"
170 @ 175	50VSD							
186 @ 145	50							
200 @ 110								


Installation – Mechanical (cont'd)

Moving of the Unit.

When moving the Air Compressor, the forklift or hand lift forks go under the Unit from the directions as indicated.

Slots in the Unit Base are provided for moving of the Compressor.

Please be advised that care must be taken when moving and positioning the Units as they may be top heavy.

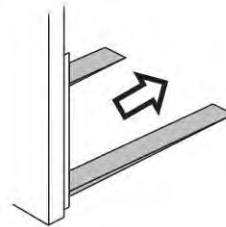

Location of the Unit.

Items to consider when installing the Unit are as follows:

- The Unit should be located in a dry, clean, cool, dust free, and well ventilated area. If possible, the Compressor should be located in a separate room or area, away from the general operations of the shop.
- Allow a minimum of 48" (1220mm) around and 60" (1524mm) above the Unit for easy access to the various sides, this being for both the proper ventilation of the Unit and ease of servicing.
- Ensure that the floor under the Unit is smooth, level and capable of bearing the weight of the Compressor. The Compressor must sit level on the floor.
- If installed in a compressor room, ensure that the room is adequately ventilated. (One Horsepower produces approximately 2500 BTU/HR.) See Page 10.
- The ambient temperature should be between 10°C to 40°C (50°F and 104°F).

- If installing the Unit on a mezzanine, ensure that the structure can safely support the weight of the Unit. As well, the sound level of the Unit may increase due to the vibration transmitted through the floor; use Vibration Pads to lessen this.

Many common Compressor problems can be attributed to the location or installation of the Unit. Make sure the Unit is in a suitable location, and installed correctly.




The Compressor must not be operated in a confined area where the heat from the Unit cannot readily escape.

Installation – Mechanical (cont'd)

Shown below are items which assist in making a good installation. These are both intake and exhaust ductwork, helping the Unit to a) draw in clean outside air and b) exhaust the warmer air away from the Unit. The warmer air may be used, with the inclusion of a damper in the exhaust ducting, to warm the interior of the building during the colder months of the year.

Intake and Exhaust Ducting

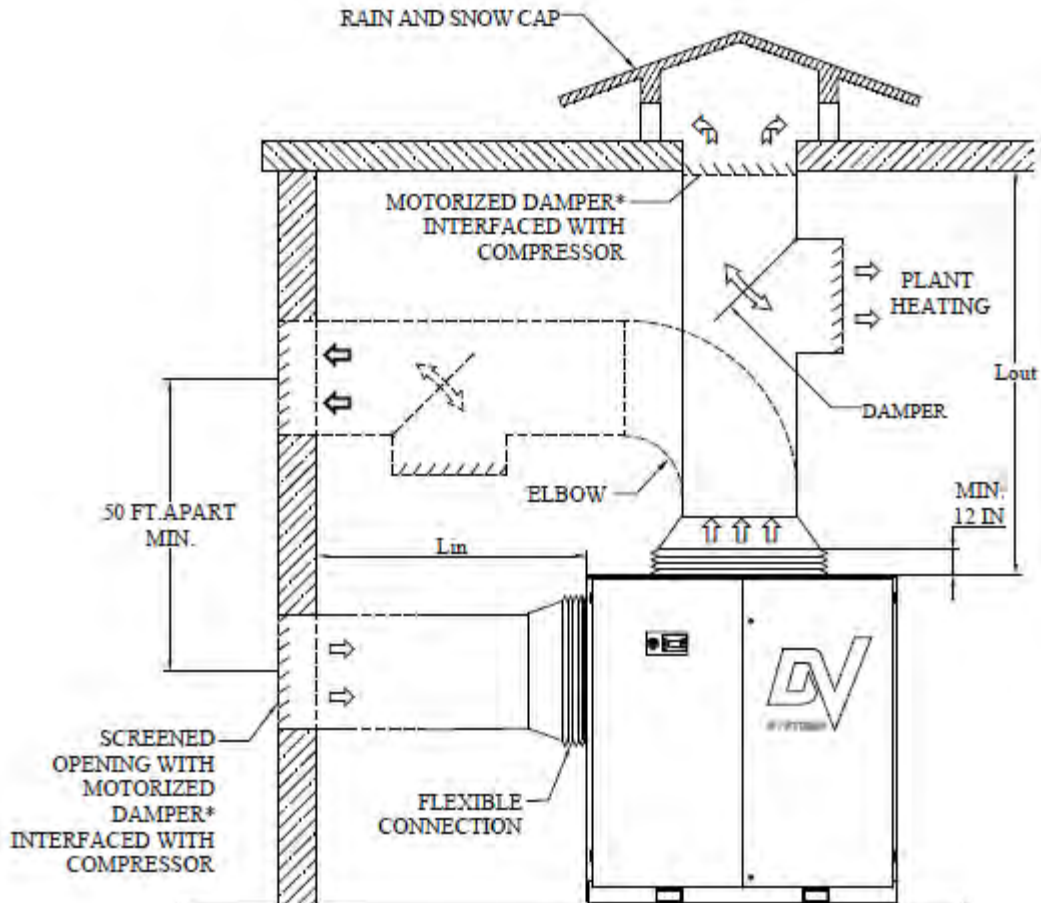

MODEL	HP	HEAT LOAD (BTU/HOUR)	COOLING AIR (CFM)	RECOMMEND MIN. DUCT SIZE	MAX. DUCT LENGTH $L_{in} + L_{out}$	INLET & OUTLET AT COMPRESSOR.
H40	40	101856	2800	Ø 24" (CIRL.)	200 Ft. (0 ELBOW)	INLET SIZE 26 7/8"W x 20 1/8"H
H50	50	127320	3500	24" x 24" (RECT.)	170 Ft. (1 ELBOW) 140 Ft. (2 ELBOW)	OUTLET SIZE 26 1/8" x 29 7/8"

NOTE:

1. DUCTING SIZE BASED ON GALVANIZED STEEL DUCTS.
2. MAXIMUM PRESSURE DROP DUE TO DUCTING SYSTEM SHOULD BE WITHIN 0.5 IN. OF WATER.
3. ADDITIONAL VENTILATION FAN IS NEEDED FOR PRESSURE DROP EXCEED ABOVE LIMIT.
4. OPERATION TEMPERATURE: MIN. 10°C (50°F) ~ MAX. 40°C (104°F).
5. ANY DEVIATION FROM ABOVE INSTALLATION, CONSULT DV SYSTEM TECHNICAL SUPPORT.

* CHOOSE INSULATED DAMPER WHEN OUTDOOR TEMPERATURE MAY DROP BELOW FREEZING POINT

Lubrication

Initial Start-up.

Each Compressor Unit built is extensively tested at the factory before shipment. The Unit is shipped with the original oil in it as used for testing purposes.

Check the Oil level and for any Oil leaks on a daily basis. This must be done when the Unit is off. Top up the Oil level when necessary.

Use only DV Systems 'DEV-3000' Synthetic Oil. As well, do not mix the 'DEV-3000' with any other lubricant.

Subsequent Oil Changes.

Drain the existing oil from the Unit. (Please be advised that the Unit cannot be drained fully of oil, as some oil may remain in various components ie Cooler, Tubing, etc.)


Fill the Oil Reservoir to the Metal Band on the External Oil Level Gauge as shown below. Do not under or overfill. See drawing below.

Use only DV Systems 'DEV-3000' Synthetic Oil, available in both 1 US gallon (3.8 litre) jugs or 5 US gallon (5 x 3.8 litre) pails. Any remaining oil may be used for 'top-ups'.

The 'MK-H50' Maintenance Kit includes:

- (5) US Gallon (5 x 3.8 litre) Oil ('DEV-3000')
- (2) Oil Filter ('DSC-624')
- (1) Air/Oil Separator Filter ('DSC-002051')
- (2) Air Filter ('DSC-002073')
- (2) Air Filter ('DSC-002074')
- (1) In Line Filter ('DSC-612')


This Kit should be used in the regular servicing of your Unit.

 **CAUTION**


Do not attempt to operate the Unit without first checking whether there is oil in the Oil Reservoir. Add oil as required. Serious damage may result from use, however limited, without oil.

 **CAUTION**

Use of improper oil may negatively affect Compressor performance or shorten Unit life. Resulting problems are not covered by the DV Systems Inc. Warranty.

 **CAUTION**

Condensation (water) may form in the Oil Reservoir with the oil. If this occurs, as the water will tend to settle on the bottom of the Reservoir, drain the water from the Reservoir until you notice oil draining. Top up the Reservoir with new oil using only the DV Systems 'DEV-3000' oil.

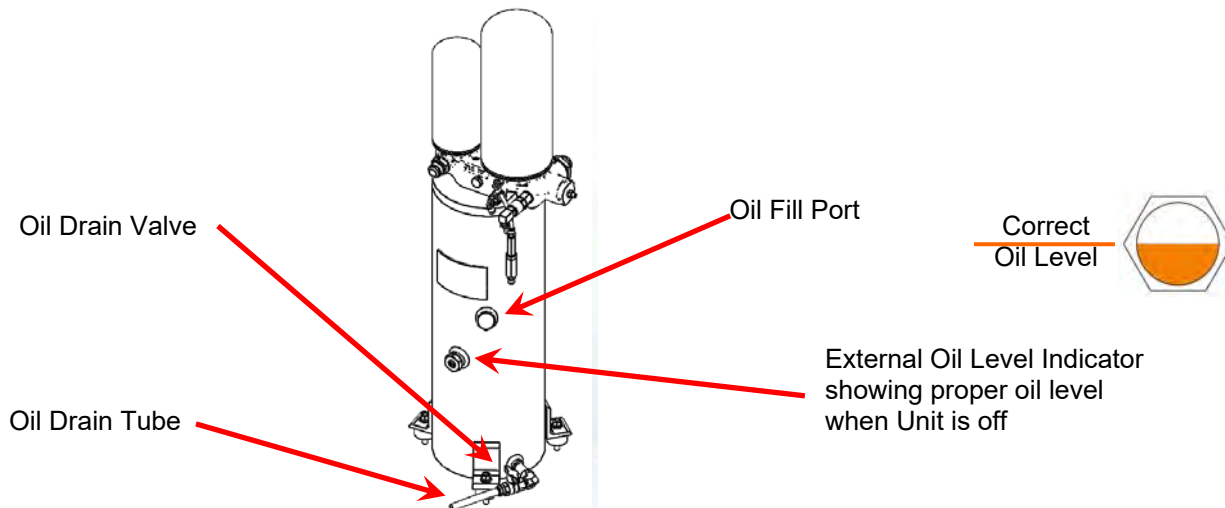

Installation - Electrical

General Information.

It is your responsibility to ensure that the Compressor Unit is electrically connected in a safe and correct manner. **Any electrical work should be carried out by a competent Electrician, and be done in such a way that it meets all applicable Codes and Regulations.**

Ensure that a suitable Fused Disconnect or Breaker (by others than DV Systems) is installed in the electrical supply before the Compressor Unit.

Electrical wiring and conduit from the building supply, through the Compressor Cabinet, and to the Switch in the Compressor Control Panel, must be rated for 125°C (257°F) or higher.



- Failure to correctly connect the Compressor to your building's electrical services may result in serious personal injury or damage to the equipment.
- Before servicing the Unit, ensure the power source has been shut down and locked off.
- Install all covers and panels before applying power to the Unit.
- Read and understand the information contained in this manual before installing or operating the Unit.

Failure to observe any of the above precautions could result in severe personal injury or death, and/or damage to the Unit.

Fusible Disconnects.

- Ensure that all wiring, fusing, etc is done in a manner that meets with the appropriate codes and regulations.
- See the sales drawings and electrical schematic contained in this manual for information about Motor nameplate amps, this is used to determine the appropriate Disconnect / Breaker and Wiring sizes.
- Units equipped with Variable Speed Drives (VSDs) MUST use FAST-ACTING FUSES. Refer to the table below for fuse sizes.

Fixed Speed Units:

Use TIME-DELAY type fuse.

**Max. Allowable Fuse =
1.75 x Motor Full Load Amp**

VSD Units:

HP	Voltage	Fuse Type	Fuse Amp	DV Fuse Part No.	DV Disconnect Kit (Disconnect + Fuses)
50	200	DFJ/ HSJ	175	F175	FD-175
	230		150	F150	FD-150
	460		70	F070	FD-070
	575		60	F060	FD-060

Installation – Electrical (cont'd)

Motors.

Wiring must be done in a manner that the full Motor nameplate voltage +/- 10% is available at the Motor terminals during start-up. Contact your local Distributor or Service Centre if additional information is needed.

The Warranty that exists on the Electric Motor is that of the original manufacturer. In the event of a Motor failure, contact your DV Systems Distributor or Service Centre for the location of the nearest authorized Motor Service Centre.



Use of an incorrect Motor for your particular building service will result in premature Motor failure, and is not covered by the DV Systems or Motor Manufacturers Warranty.

Motor / Air End Rotation.


It is critical that the Motor and Air End in the Rotary Screw Unit be turning in the correct manner as **the Unit may not be equipped with an 'Anti Rotation Switch'.** Irreparable damage will be done if the Unit rotates in the **reverse direction.** Motor / Air End rotation must be visually verified. The correct rotation is as indicated at the Coupling area or Belt Housing of the Unit.

Fixed Speed Units:


- With Advanced Phase Detection feature, an 'E:0090 Phase Sequence' Error will appear on the Controller Screen if the phase sequence is incorrect. If this occurs, simply switch the **incoming leads 'L1' and 'L3'** at the Control Panel.
- If 'Anti Rotation' Switch is present, an 'E:0902 Anti Rotation' Error will appear on the Controller Screen if the rotation is incorrect. If this occurs, simply change 'L1' and 'L3' at the Control Panel.

Variable Speed Units:

- The Inverter to the Motor is pre-wired at the factory.
- Remove the Cover Plate from the Coupling area and pay close attention to the arrow indicating the correct rotation.
- To verify the correct rotation, start the Unit and turn off immediately using the Emergency Stop Button.
- If the rotation is not correct, simply change two of the power leads to the Unit.

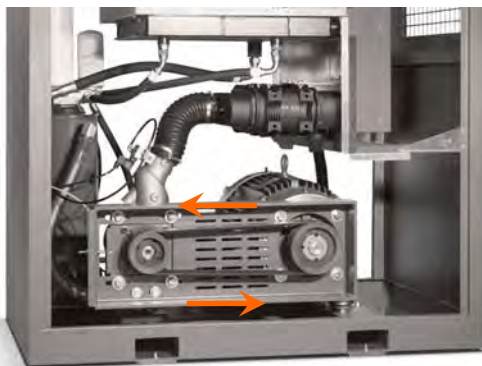

Picture from Rear of Unit

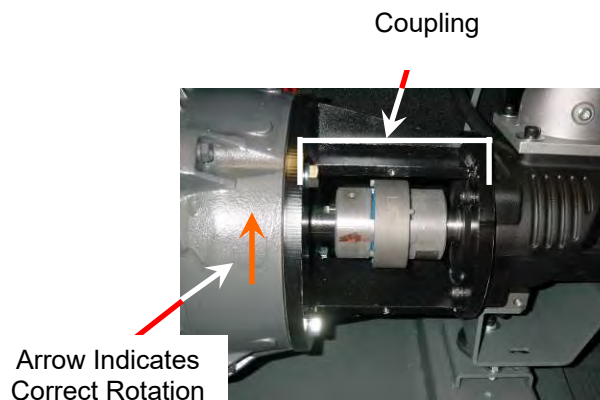

Picture from Front of Unit

Installation – Electrical (cont'd)

Cooling Fan Rotation.


To ensure that the Unit operates at optimum temperatures, a Cooling Fan is located on the top of the Unit to draw warm air from the Cabinet Enclosure. It is imperative that the Fan rotate in the correct direction.

A label inside the Unit (as shown at right) indicates the proper Fan rotation.



If the Cooling Fan rotation is incorrect, switch the incoming leads 'L1' and 'L3' to the Unit.

Wiring from
Cooling Fan

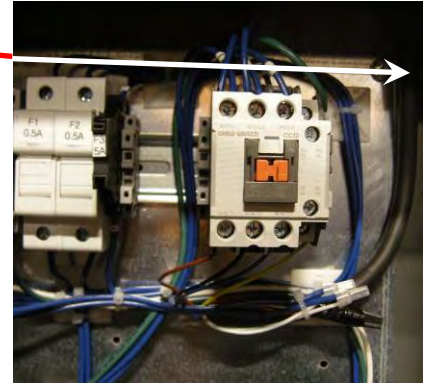



AC Motor Maintenance Instructions



Cleaning.

To ensure that the Motor operates at optimum temperatures and provides years of trouble-free service, periodically clean the outside of the Motor Housing of any build-up of dust, etc. Though it is not anticipated that, if installed correctly and in a suitable environment, there should be much build-up on the Motor, keeping the Housing clean will allow the Motor to operate more efficiently.

Lubrication.

This is a ball bearing motor. The bearings have been lubricated at the factory. Motors that do not have re-grease capability are factory lubricated for the normal life of the bearings.

Some motor designs use different bearings on each motor end. Noted below is a chart outlining the interval at which the bearings of Motor should be lubricated, this based on the Bearing Sizes. This must be part of a regular maintenance schedule.

Motor In HP	Interval in Hours	Drive End *		Opposite Drive End
		Weight of Grease	Volume of Grease	Weight of Grease
		Ounces (Grams)	In ³ (Teaspoon)	Ounces (Grams)
50	1,700	0.76 (20.1)	1.2 (4.0)	0.61 (17)
40	2,000	0.76 (20.1)	1.2 (4.0)	0.61 (17)

*Drive End would be the end that is connected to the driven device (air end).

**Opposite Drive End would be the end that is connected to the fan assembly.

The above chart is based on a standard environment in which the Motor is operating of 40°C (104°F). For other conditions, please multiply the Hour Interval from the chart above by the factor as indicated below.

Severity of Duty	Factor	Environmental Conditions
Standard	1.0	40°C (104°F) , clean, little corrosion
Severe	0.5	50°C (122°F), moderate dirt, corrosion
Extreme	0.1	> 50°C (122°F), severe dirt, abrasive dust
Low Temperature	1.0	< 30°C (86°F)

Lubricant.

50 HP Motors are pre-greased with High temperature Dow Corning 'DC44' Medium Grease. You must use this grease. Do not mix with other types of grease.


40 HP Motors are pre-greased, normally with Mobil Polyrex EM. Equivalent and compatible greases are Texaco Polystar, Chevron SRI #2, and Shell Dolium BRB.

Start-up Procedures

CAUTION

Do not attempt to operate the Unit without first checking whether there is oil in the Oil Reservoir. Add oil as required. Serious damage may result from use, however limited, without oil.

Unit Controls

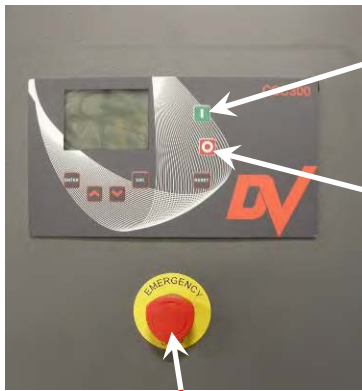

Start Button
Allows the Unit to start.

Stop Button
Use this to shut the Unit off. Allows the Unit to idle and then stop after several seconds.

Emergency Stop Button

Do not use to normally stop the Unit. To be used to stop the Unit in emergencies only. Normal use will damage electrical controls, drive, and Shaft Seal.

Initial Start-up

- 1) Open the RH Front Access Panel, and ensure that there is sufficient Oil in the Oil Reservoir. Refer to the 'Lubrication' section (Page 11) in this manual for proper type and level of Oil.
- 2) Ensure the Shipping Cleats are removed as indicated on Page 3.
- 3) Do a brief visual inspection of the Unit.

- 4) Place the Fused Disconnect / Breaker in the 'On' Position. Check that there is power to the Controller.
- 5) Turn the Unit on momentarily by pressing the 'Start' Button on the 'CSC300' Controller. Immediately press the 'Emergency Stop' Button to stop the Unit. Ensure the Motor/Air End are rotating in the correct direction. See 'Motor/Air End Rotation' on Page 13.

NOTE

If the rotation of the Air End is incorrect, switch the phases 'T1' and 'T3' between the Inverter and Motor. Refer to the accompanying wiring schematic.

Also ensure the Cooling Fan is rotating correctly. See Page 14.

- 6) Allow the Unit to operate for approximately 15 minutes. During this time, measure the amp draw and voltage of the Unit at full load, and ensure that these do not exceed the figures as noted on the Unit.
- 7) Stop the Compressor by pressing the 'Stop' Button on the Units 'CSC300' Control Pad. Check for any air or oil leaks.

CAUTION

Do not place any materials in close proximity to the Compressor. Placing materials against or close to the Unit will limit the cooling required, and could lead to premature failure.

WARNING

Shut off all power to the Compressor Unit before attempting any repair or maintenance.

NOTE

Adjusting the settings of the Controller could adversely affect the performance of the Unit. Only those individuals with knowledge of the Unit should make any adjustments.

Preventative Maintenance Schedule



When servicing the Air Compressor, shut off all power to the Unit, and drain it of air pressure.



It is the responsibility of the Compressor owner to ensure that a regular Maintenance Schedule is followed.

Noted on the following pages are general Maintenance guidelines based on average working conditions. Should the Unit be worked under extreme conditions, please contact your DV Systems Distributor for further input. As well, all maintenance/service work must be carried out by a qualified Technician.

The typical operating temperature of the Unit, this dependent on ambient temperatures, is between 70°C and 85°C (158°F and 185°F).

If the operating temperature of the Unit is too low (less than 70°C (158°F)):

- condensation will build up in the system and mix with the oil, causing damage to the internal components in the Unit
- Change the ambient conditions to increase the operating temperature.

If the operating temperature of the Unit is too high (above 85°C (185°F)):

- the oil will oxidize and lose it's properties, this causing internal damage to components as well
- to combat this, the oil must be changed more often than noted below.

Note: For Compressor Units used in an environment where the ambient temperature is above 32°C (90°F), the components marked with a '# ' (on the 'Maintenance Schedule' on Page 17) must be changed more frequently.

Regular Maintenance Items.

DV Systems offers a Maintenance Kit for your Unit, namely:

MK-H50 40/50 HP 'H Series' Units

Each Kit consists of the following items, follow Schedule Table on page 17 for the Maintenance Schedule.

- (5) US Gallon (5 x 3.8 litre) Oil ('DEV-3000')
- (2) Oil Filter ('DSC-624')
- (1) Air/Oil Separator Filter ('DSC-002051')
- (2) Air Filter ('DSC-002073')
- (2) Air Filter ('DSC-002074')
- (1) In Line Filter ('DSC-612')

Internal Access for Maintenance.

The internal components of the Unit are accessible for servicing by way of removing both Front Panels and the Bottom Rear Panel.



Front Access



Rear Access



Preventative Maintenance Schedule (cont'd)

Maintenance Item:	Daily	Maintenance Interval (in 000's of Hours)																			
		2	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36	38	40
Compressor Room																					
Temperature	Inspect	Ambient Temperature should be between 10°C and 40°C (50°F and 104°F)																			
Cleanliness	Inspect																				
Air Compressor Unit																					
Check Oil Level	Inspect																				
Replace Oil # (See Note b)	(1)				X				X				X				X				X
Replace Oil Filter #	(2)		X		X		X		X		X		X		X		X		X		X
Replace Air / Oil Separator #	(3)				X				X				X				X				X
Replace Air Intake Filter #	(4)	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Replace Coupling Spider*	(5)				X				X				X				X				X
Replace Belts**					X				X				X				X				X
Replace Tank Relief Valve							X						X						X		
Replace Solenoid (6)					X				X				X				X				X
Rebuild Intake Valve (7)					X				X				X				X				X
Rebuild Thermo Valve (8)							X						X						X		
Rebuild Minimum Pressure Valve (9)					X				X				X				X				X
Replace Scavenge Line Filter (10)					X				X				X				X				X
Motor Bearing Lubrication		Refer to Motor Manufacturer's Recommendations on Page 14																			

*H series compressors with Variable Speed Drive
 **H series fixed speed compressors

- Notes:**
- a) For Compressor Units used in an environment where the ambient temperature is above 32°C (90°F), or b) where the Unit temperature runs regularly above 80°C (175°F), the components marked with a '#' must be changed twice as often (example: in 4000 hours instead of 8000), and not as noted above.
 - b) The DV Systems Oil used in the Rotary Screw Units is rated as an 8000 hour Oil. A complete Oil change must be done every 8000 hours of Unit operation, or every 12 months, whichever occurs first. Please refer to the Warranty on Page 28 for further information.
 - c) If a component, during a regular inspection, has proven to be defective or unfit for regular operation, it must be repaired or replaced.

Parts and Repair Kits based on the above chart are as follows:

- | | | |
|------|--------------------------------|-------------------------|
| (1) | Oil: | DEV-3000 |
| (2) | Oil Filter | DSC-624 |
| (3) | Air / Oil Separator: | DSC-002051 |
| (4) | Air Intake Filter | DSC-002073 + DSC-002074 |
| (5) | Coupling Spider | DSC-001983 |
| (6) | Solenoid | DSC-002052 |
| (7) | Intake Valve Repair Kit | DSC-002075 |
| (8) | Thermo Valve Repair Kit: | DSC-111-1 |
| (9) | Minimum Pressure Valve Kit: | DSC-231 |
| (10) | Scavenge Line 'In Line' Filter | DSC-612 |
| | Ambient Filter | DSC-002069 |

As noted previously, the 'MK-H50' Maintenance Kit includes the following items:

- | | | |
|-----|--------------|-------------------------------|
| (5) | 'DEV-3000' | US Gallon (5 x 3.8 litre) Oil |
| (2) | 'DSC-624' | Oil Filter |
| (1) | 'DSC-002051' | Air/Oil Separator Filter |
| (2) | 'DSC-002073' | Air Filter |
| (2) | 'DSC-002074' | Air Filter |
| (1) | 'DSC-612' | In Line Filter |



Common Compressor Faults

Common Faults.

Noted below are the most common Faults experienced.

'CSC300' Alarms.

There is an issue with the Unit, but it will still operate.

<u>Code:</u>	<u>Description:</u>	<u>Most Common Items to Check:</u>
A:0083	Motor phase imbalance	Check supply voltage, fuses and cable
A:0119	Delivery Pressure High	Solenoid not working, Intake Valve Orifice clogged, Transducer dirty or faulty, pressure changed incorrectly, alternate external pressure source
A:0129	Delivery Temperature High	Ambient temp high, Unit dirty, low oil level, no air flow through Unit, Temp Sensor defective
A:2816	Power Failure Occurred	Press 'Reset' Button and restart Unit
A:4819	Routine Service Due	Service Unit and reset Service Timer (Page 'P16' on Controller)
A:4809	Grease Service Due	Service motor and reset Grease Service Timer (Page 'P16' on Controller)

'CSC300' Shutdown Errors.

There is an issue with the Unit, and the Unit will not operate until the Fault has been addressed.

<u>Code:</u>	<u>Description:</u>	<u>Most Common Items to Check:</u>
E:0010	Emergency	Emergency stop switch is pressed
E:0070	Fan Motor Alarm	Check electrical connections
E:0082	Motor Overload	Motor drawing high amps, low voltage, high pressure settings, low oil level
E:0083	Motor phase Imbalance	Check motor connections in the control panel and motor connection box
E:0090	Phase Sequence	Rotation of Motor wrong, sequence order of supply cable incorrect
E:0091-0093	Phase L1/L2/L3 Fault	Check supply voltage, fuses and cable
E:0115	Delivery Pressure Sensor Fault	Transducer not making good electrical contact, or defective
E:0119	Delivery Pressure High	Solenoid Not working, Intake Valve Orifice clogged, Transducer dirty or faulty, pressure changed incorrectly, alternate external pressure source
E:0125	Delivery Temp Sensor Fault	Temperature Sensor not making good electrical contact, or defective
E:0129	Delivery Temperature High	Ambient temp high, Unit dirty, low oil level, no air flow through Unit, Temp Sensor defective
E:0902	Anti-Rotation	Rotation of Main Motor wrong, Solenoid Valve not relieving pressure
E:1902	Inverter Fault	Variable frequency drive tripped. Check VFD screen for more info.

Variable Speed Drive

Your DV Systems 'H Series' Rotary Screw Compressor Unit may have been equipped with a 'Variable Speed Drive', or 'VSD'. A Compressor with an integral VSD can handle the constant loads for an extended period of time (running at 100% duty cycle), but it can also run at slower speeds to accommodate lower air demands at other times of the day.

Variable Speed Drives can reduce the overall energy costs associated with operating the Compressor Unit by simply controlling the speed of the Motor and Air End to match consumption. As Rotary Screw Compressors using the variable speed technology match the varying air demands and therefore have the ability to impact your energy consumption, some energy providers have offered rebates when these Units are purchased. Consult your local energy provider to determine if this applies.

Shown below is an 'H Series' Unit with a Variable Speed Drive.



'CSC300' Controller



Variable Speed Drive

VSD Interface


The VSD Controller Interface is shown at right. It provides a means of operating, monitoring, and adjusting the parameters of the Variable Speed Drive.

Please note that adjustments to the parameters of the Variable Speed Drive should be made only by qualified Technicians, or with the guidance of factory trained personnel. Incorrect adjustments will affect the performance of the Unit, and could result in damage to the Drive.







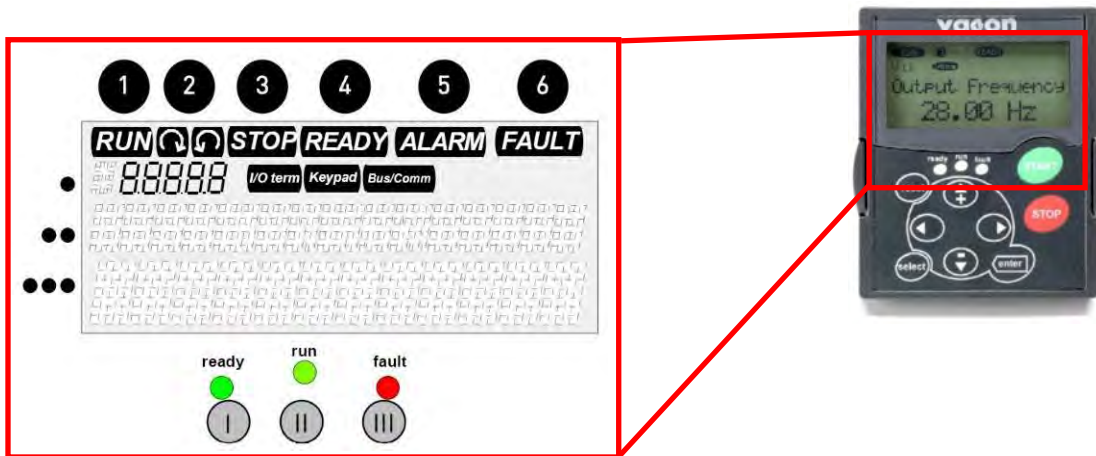


Variable Speed Drive (cont'd)

Operating Screen



Typical Drive Status Indicators on Screen

- 1 RUN = Motor is running; Blinks when the stop command has been given but the frequency is still ramping down.
- 2  = Indicates the direction of motor rotation.
- 3 STOP = Indicates that the drive is not running.
- 4 READY = Lights when AC power is on. In case of a trip, the symbol will not light up.
- 5 ALARM = Indicates that the drive is running outside a certain limit and a warning is given.
- 6 FAULT = Indicates that unsafe operating conditions were encountered due to which the drive was stopped.

-   = Illuminates with the AC power connected to the drive and no faults are active. Simultaneously, the drive status indicator READY is lit up.
-   = Illuminates when the drive is running. Blinks when the STOP button has been pushed and the drive is ramping down.
-   = Blinks when unsafe operating conditions were encountered due to which the drive was stopped (Fault Trip). Simultaneously, the drive status indicator FAULT blinks on the display and the fault description can be seen, see chapter 7.3.4, Active Faults.

- = Location indication; displays the symbol and number of menu, parameter etc.
Example: M2 = Menu 2 (Parameters); P2.1.3 = Acceleration time
- = Description line; Displays the description of menu, value or fault.
- = Value line; Displays the numerical and textual values of references, parameters etc. and the number of submenus available in each menu.



Variable Speed Drive (cont'd)


Common VSD Fault Codes

Noted below are the most common fault codes that may appear on the VSD. For a more thorough list, please check the manual which deals exclusively with the Vacon Variable Speed Drive and which accompanied the Unit.

Fault Code	Fault	Possible Causes:	Corrective Measures:
1	Over-current.	Current too high in Motor Cable.	Check loading. Check Motor. Check Cables.
2	Over-voltage.	The DC link voltage has exceeded the limits. - too short a deceleration time - high voltage spikes in supply	Make deceleration time longer. Check input voltage.
3	Ground Fault.	Insulation failure in Motor or wiring.	Check Motor wires and Motor.
8	System Fault.	- component failure - faulty operation	Reset the fault and restart the Unit.
13	Frequency Converter under temperature.	Heatsink temperature is below -10°C.	
14	Frequency Converter over temperature.	Heatsink temperature is over 90°C. Overtemperature warning is issued when the heatsink temperature exceeds 85°C.	Check the amount and flow of cooling air. Check the heatsink for dust. Check the ambient temperature. Ensure the switching frequency is not too high in relation to ambient temperature and motor load
15	Motor stalled.	Motor stall protection has tripped.	Check Motor and load.
16	Motor over-temperature.	Motor is overloaded.	Decrease motor load.
17	Motor under-load.	Motor under-load temperature has tripped.	Check load.
22	EEPRON checksum fault.	Parameter save fault. - faulty operation. - component failure.	Should the fault re-occur, contact the Distributor.
25	Microprocessor watchdog fault.	- faulty operation. - component failure.	Reset the fault and restart the Unit. Contact Distributor.
31	IGBT temperature (hardware).	IGBT Inverter Bridge overtemp protection has detected too high a short term overload current.	Check loading. Check motor size. Make identification run.
32	Fan cooling.	Cooling Fan of frequency converter does not start when ON command is given.	Contact Distributor.
50	Analogue Input lin < 4mA.	Current at the analogue input is less than 4 mA. - control cable is broken or loose. - signal source has failed.	Check the current loop circuitry.
52	Keypad communication fault.	The data connection between the control keypad and the frequency converter is broken.	Check keypad connection and possible keypad cable.
54	Slot fault.	Defective option board or slot.	Check board and slot. Contact the nearest Vacon Distributor.
56	PT100 board temperature fault.	Temperature limit values set for the PT100 board parameters have been exceeded.	Find the cause of temperature rise.


Air Filtration and Refrigerated Air Dryer

Your Unit may have been shipped with a Separator Filter and Refrigerated Air Dryer, these to assist in providing good quality air to your point of use. Shown below is a typical installation showing the Compressor, Air Receiver, Refrigerated Air Dryer, and Filters.

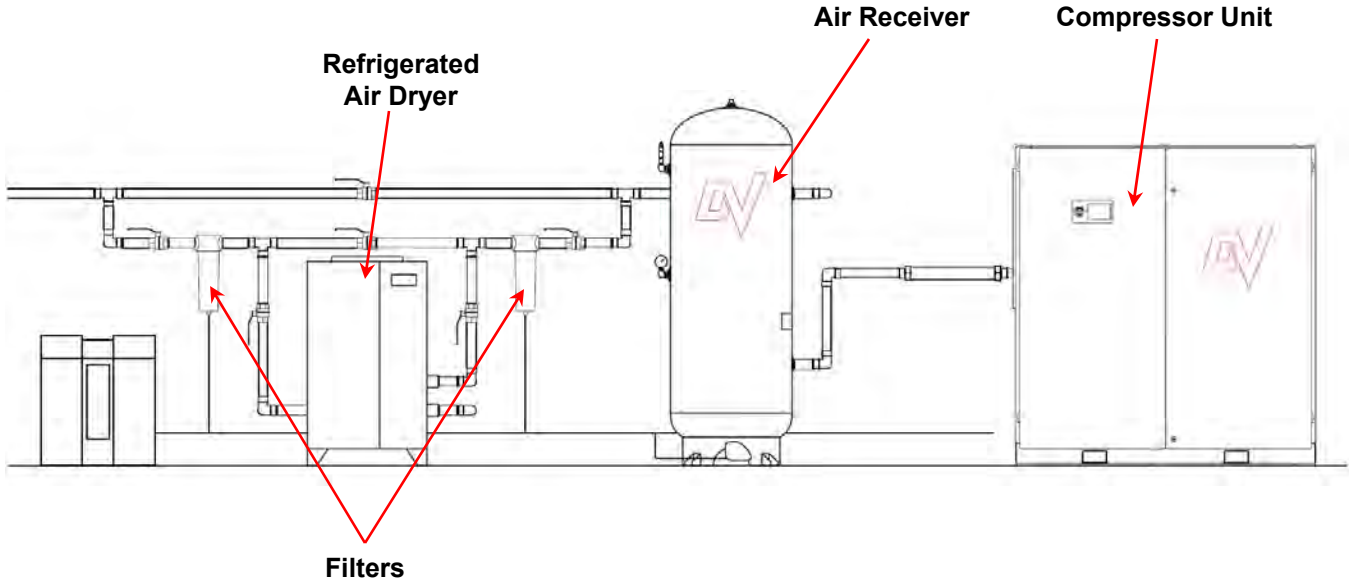

More detailed information concerning the Dryer Unit is included in the Dryer manual. The information contained in this manual is a 'quick reference' only.

Dryer Controls.

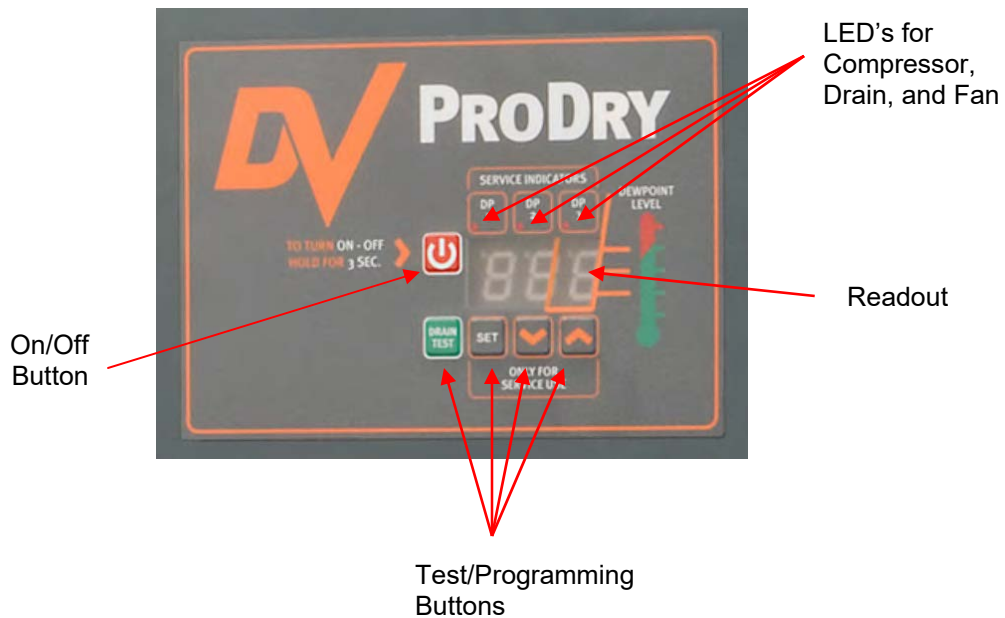


Air Filtration and Refrigerated Air Dryer (cont'd)

Typical Dryer Operation.

The Dryer will operate as follows:

- Pressing the 'On/Off' Button for 3 seconds will start the Unit
- There is a time delay of up to 2 minutes before the Refrigerant Compressor starts.
- The Condenser Fan will start approx. 30 seconds there-after.
- The Fan will not normally run at full speed, this indicated by a flashing LED
- The readout will initially show ambient temperature indicated by 3 horizontal bars on the readout
- Once the Fan and Compressor start, the dew point of the Unit will decrease to approx. 1°C, this indicated by 1 or no horizontal bars.
- Once at approx. 1°C, the Fan will stop, only to be called to run again once the temperature increases to approx. 5°C
- Pressing the 'On/Off' Button (when the Unit is operating) will run the Fan at full speed for several seconds, after which the Unit will stop. (The LED will be on continually while the Fan runs at full speed.)

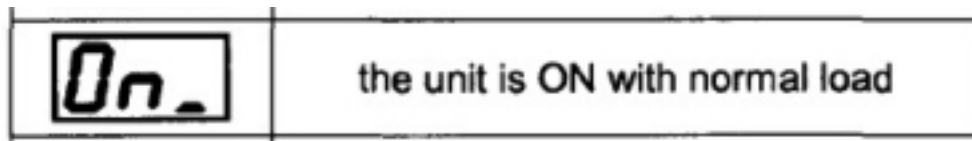

- As well as showing the dew point, the readout may indicate several fault codes as suggested below.

Typical Fault Codes.

The readout will indicate a variety of 'fault codes', the most common being as follows:

ESA

Energy Saving Mode.

- The Dew Point has been running at below -1°C for over 6 minutes.
- The Unit will automatically restart operation at 6°C.

PFI

Temperature Probe Alarm.

- The Temperature Probe is not working properly. It may not be connected to the Board, or the Probe may be defective.
- Replace the Probe if necessary.

HtA


High Temperature Alarm.

- The Dew Point has been running at above 12.5°C for over 6 minutes. The Unit must be manually turned off and on.
- The fault could be caused by a dirty radiator, high ambient temperature, a faulty Fan, or a faulty refrigerant Compressor, to name only a few.

Air Filtration and Refrigerated Air Dryer (cont'd)

Typical Separator Filter.

As previously noted, the Separator Filter should be located between the Compressor and the Refrigerated Dryer. It contains a 1 micron Separator Element which protects the Dryer Unit by removing liquids and solid particles 1 microns and larger.

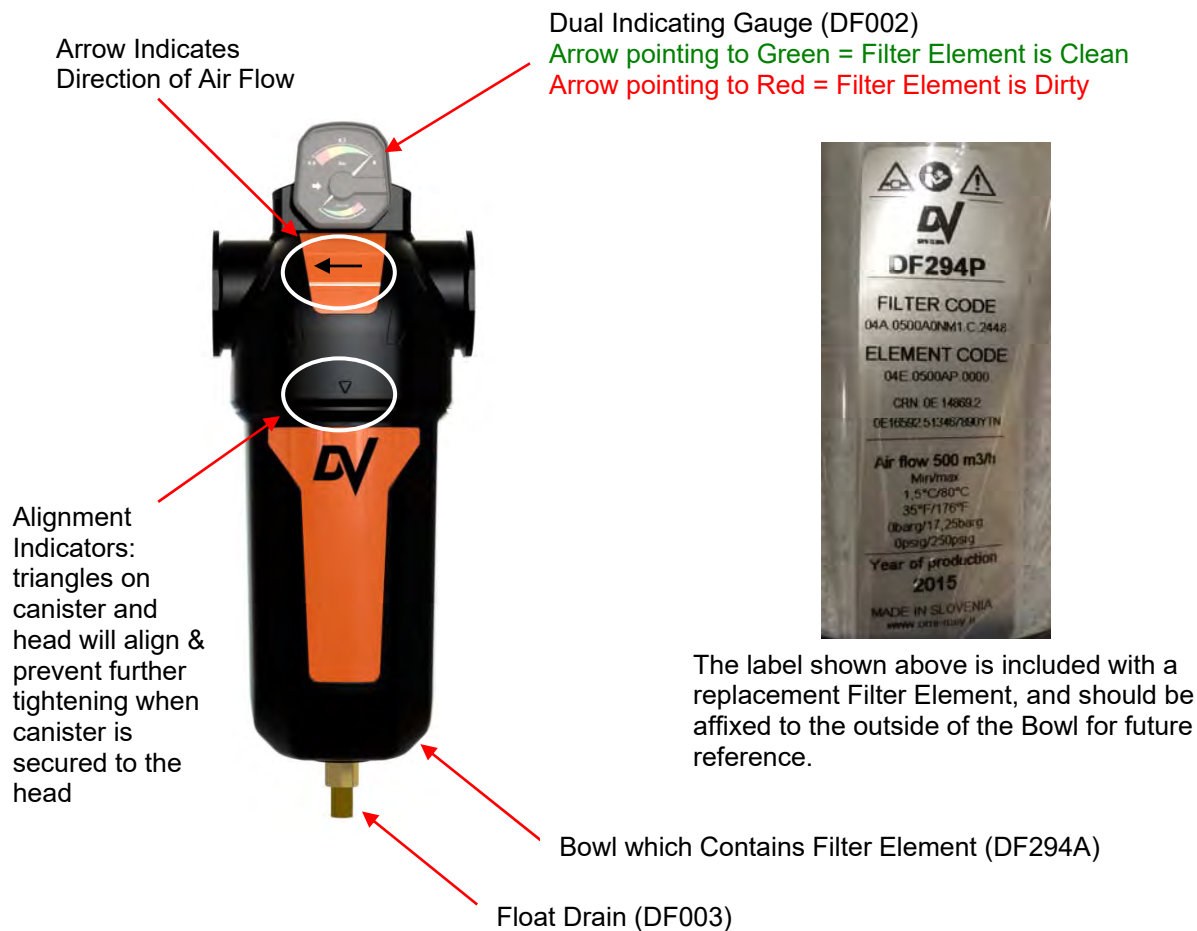

Filter Element Replacement.

To replace a dirty Filter Element:

- Shut the Compressor Unit off.
- Bleed any compressed air from the system to ensure there is no pressure at the Filter.
- Unscrew the Bowl from the assembly, exposing the dirty Filter Element.
- Pull the Filter Element out of the Canister Head
- Clean any debris from the inside of the Bowl
- Remove the O-ring from the inside of the Canister Head
- Install the new O-ring making sure it is properly seated
- Place the new 1 micron Separator Filter Element into the Bowl (the filter is self-centring).
- Screw the Canister with the Element inside it to the Canister Head until the indicators line up.
- Gauge will return to **green** when Filter is once again under pressure.

Trouble Shooting Guide



When servicing the Air Compressor, shut off all power to the Unit, and drain it of air pressure.

The 'Conditions', 'Causes', and 'Suggested Corrections' as indicated below and on the following page(s) are only a guideline for failures that we have found to be most common.

Though this information is provided in this booklet, it is assumed and expected that any personnel involved in the servicing of an Air Compressor Unit is knowledgeable with this type of equipment. Do not attempt to service a Compressor Unit unless you are familiar with it, as there are many issues that may come into play, the most important being personal safety and the welfare of the Unit.

Should you have any questions, or require servicing to your Unit, please contact your local DV Systems Distributor/Service Center.

<u>Condition:</u>	<u>Cause:</u>	<u>Suggested Correction:</u>
A. Unit won't start.	No power to the Unit. Loose and/or missing wires in the electrical circuit. Emergency Stop Button pressed in. Motor Overload is tripped. Compressor over-heated and stopped. Compressor stopped by over-pressure. Unit has 'timed out' / shut off because pressure has not gone below cut-in pressure of 100 psi (6.9 bar). Power interruption.	Check that power at the disconnect or breaker is on. Also, check any primary and secondary fuses. Check that all wiring connections are tight. With a wiring schematic, check that all wiring is present and correct. Release by twisting and pulling out. Reset the overload. Insufficient air flow to cool Unit. Ambient temperature too high. Heat Exchanger is dirty. Faulty Temperature Switch. Oil level is low. Solenoid Valve faulty. Seals on Intake Valve leaking. Intake Valve Spring broken. Pressure Transducer stopped Unit. Lower maximum pressure setting. Drop pressure below 100 psi (6.9 bar). Reset the Unit.



Trouble Shooting Guide (cont'd)

<u>Condition:</u>	<u>Cause:</u>	<u>Suggested Correction:</u>
B. No or Insufficient Air Flow.	Air Filter is dirty. Oil Separator is blocked. Intake Valve is faulty. Air leaks in the system. Pressure limits are incorrectly set. Blowdown Solenoid Valve is open.	Replace the Air Filter. Replace the Oil Separator. Repair or replace the Intake Valve. Check the Unit and system for air leaks. Adjust the pressure settings. Check the wiring to the Solenoid and replace as necessary.
C. Unit is overheating.	Ambient temperature is too high. Blocked air circulation at the Unit. Heat Exchanger is dirty. Oil level is too low. Using wrong type of compressor oil. Thermo Valve is faulty. Oil Filter is blocked. Temperature Sensor is faulty. Thermostat is faulty. Pressure is too high. Cabinet door/panel is open/off.	Check cooling air circulation. Check the air circulation in and around the Unit. Clean the Heat Exchanger Add oil as required. Change to the factory recommended oil. Check and repair as necessary. Replace the Oil Filter. Check the wiring to the Temperature sensor. Replace the Sensor if necessary. Replace the Thermostat. Lower the pressure setting. Secure the door/panel to the Unit.
D. Compressor Starts Slowly.	Intake Valve not functioning properly. Ambient temperature is too low. Minimum Pressure Valve leaking back to Air End. Minimum Pressure Valve setting is too high. Using wrong type of oil.	Check Intake Valve operation. Repair or replace as required. Stop and restart once ambient increases. Repair or replace the Minimum Pressure Valve. Adjust Minimum Pressure Valve setting to 65 psi. Change to factory recommended oil.



Trouble Shooting Guide (cont'd)

<u>Condition:</u>	<u>Cause:</u>	<u>Suggested Correction:</u>
E. Intake Valve Leaks Oil When Unit Stops.	<p>Intake Valve Seal leaks.</p> <p>Intake Valve stuck in open position.</p> <p>Blowdown Solenoid not functioning.</p>	<p>Repair using an Intake Valve Repair Kit.</p> <p>Repair or replace the Intake Valve.</p> <p>Replace the Solenoid.</p>
F. Oil Consumption is Too High.	<p>Oil level is too high.</p> <p>Oil Return Line (Scavenge Line) is blocked.</p> <p>Oil Separator is saturated with oil.</p> <p>Wrong type of oil used.</p> <p>Unit is operating at too high a temperature.</p> <p>Oil leak.</p> <p>Unit load is light or excessive load/idle cycles.</p>	<p>Reduce the oil level to the proper level.</p> <p>Clean and/or replace the Scavenge In-Line Filter.</p> <p>Replace the Oil Separator.</p> <p>Change to factory recommended oil.</p> <p>See 'Section C'.</p> <p>Repair oil leak.</p> <p>Ensure Unit is set to operate at correct pressures, and there is a <u>minimum</u> of 10 psi (0.7 bar) differential. Also the Unit could be oversized for the tank capacity.</p>
G. Compressor Surges.	<p>Restriction in Heat Exchanger or Hoses.</p> <p>Pressure Transducer setting is incorrect or malfunctioning.</p> <p>Blockage at Unit outlet.</p> <p>Dryer is freezing up, not allowing air to pass through.</p> <p>Air Receiver is too small.</p>	<p>Flush out or replace.</p> <p>Set pressure as per instructions or replace.</p> <p>Check for obstructions in outlet piping.</p> <p>Check that the Dryer parameters are correct. Increase dew point to 2.0 if required.</p> <p>Use a minimum 240 Gallon Tank for 50 HP Units.</p>
H. High Power Consumption.	<p>Improper air pressure settings.</p> <p>Blowdown Solenoid is not functioning.</p> <p>The voltage in the building is too low or there is a phase imbalance.</p> <p>The Motor is failing.</p>	<p>Reset the pressure as per factory defaults.</p> <p>Inspect or replace as necessary.</p> <p>Contact an Electrician to verify.</p> <p>Have Motor inspected.</p>
I Fault Alarms.	<p>Emergency Stop.</p> <p>High Temperature.</p> <p>Low Temperature.</p> <p>High pressure.</p>	<p>Ensure Emergency Stop Button is not pressed in.</p> <p>See 'Section C'.</p> <p>Ambient temperature is too low. Increase to 10°C (50°F).</p> <p>Check the pressure settings, the Pressure Transducer and the wiring to the Transducer.</p>



Limited Warranty : H Series Screw Compressors

The manufacturer warrants the product manufactured by it and sold to the original purchaser, when properly installed, operated, applied, and maintained in accordance with procedures and recommendations outlined in the manufacturer's instruction manuals, to be free of defects in material and workmanship for a period of one (1) year from the date of installation, not to exceed eighteen (18) months from the date of manufacture, provided such defect is discovered and brought to the manufacturer's attention within the aforesaid warranty period, conditional upon the following:

- 1) Genuine 'DEV-3000' Lubricant and Parts are used for the full warranty period.
- 2) The Unit is maintained in accordance with the manufacturer's instruction manual for the Unit, with the following minimum maintenance requirements:
 - A) Complete Oil change every 8000 hours (not to exceed 12 months) from the date of initial start-up using 'DEV-3000' Lubricant. When operating in adverse conditions, Oil changes must be done more frequently.
 - B) Oil Filter must be changed every 4000 hours (not to exceed 6 months) from the date of initial start-up using the appropriate DV Systems part. When operating in adverse conditions, Oil Filter changes must be done more frequently.
 - C) Air Intake Filter must be changed every 2000 hours (not to exceed 6 months) from the initial date of start-up using the appropriate DV Systems part. When operating in adverse conditions, Air Intake Filter changes must be done more frequently.
 - D) Air/Oil Separator Filter must be changed every 8000 hours (not to exceed 12 months) from the date of initial start-up using the appropriate DV Systems part. When operating in adverse conditions, Air/Oil Separator changes must be done more frequently.
 - E) Appropriate and complete maintenance records must be kept by the End User. As well, the End User must retain copies of invoices indicating the timely purchase of the DV Systems Compressor Oil and maintenance/service parts. All records and invoices must be kept for the duration of the manufacturer's warranty period.
- 3) Disclaimer:
 - A) The following items are considered normal wear items, and are warranted for a period of one (1) year from the date of installation, not to exceed eighteen (18) months from the date of manufacture; the Shaft Seal on the Air End Drive Shaft, the Intake Valve Assembly (and its components), and the Minimum Pressure Valve.
 - B) All electrical components are warranted for a period of one (1) year from the date of installation, not to exceed eighteen (18) months from the date of manufacture.

An additional four (4) year extended Air End Warranty and a four (4) year extended Three Phase Baldor Motor Warranty are available on those Units that:

- A) have been registered with the manufacturer within thirty (30) days from the date of purchase, this done by returning the 'DV Systems Rotary Screw Compressor Start-Up Sheet' and
- B) have been maintained in accordance with the manufacturer's instruction manual as noted in '2' above.

The manufacturer will repair or replace any product or part determined to be defective by the manufacturer within the warranty period, provided such defect occurred in normal service and is not the result of misapplication, misuse, abuse, neglect, incorrect maintenance, accident, or normal wear. Normal maintenance items requiring routine replacement are not warranted. Please refer to the appropriate service bulletin to determine normal maintenance requirements.

The warranty covers parts and labour for the warranty period (excluding the Three Phase Baldor Motors. Labour is not covered in the (4) year extended Baldor Motor Warranty.) Either repair or replacement shall be at the sole option of the manufacturer. Any service performed on the product by anyone other than the manufacturer must first be authorized by the manufacturer. Unauthorized service voids the warranty and any resulting charge or subsequent claim will not be paid.

Products repaired or replaced under warranty shall be warranted for the unexpired portion of the warranty applying to the original product, based on the original date of invoice as outlined above.

There is no other expressed warranty. Implied warranties including those of merchantability and fitness for a particular purpose are limited to one (1) year from the date of invoice to the extent permitted by law and any and all implied warranties are excluded. This is the exclusive remedy. Liability for consequential damages under any and all warranties are excluded to the extent exclusion is permitted by law.

This warranty gives you specific rights, and you may also have other rights within your jurisdiction.

This warranty does not cover:

- 1) Merchandise that has become inoperative because of ordinary wear, misuse, neglect, accident, or improper and unauthorized repair or alteration.
- 2) Electric Motors manufactured and identified as the product of another company.
- 3) Compressor Units that have not been properly maintained in accordance with the recommended maintenance and lubrication change procedures and/or that have been subject to inordinate use through being inadequately sized or poorly installed.
- 4) Compressor Units using other than the recommended lubricant.
- 5) Costs occasioned by the removal, replacement, or repair of merchandise (other than by DV Systems) without previous authorization from DV Systems.
- 6) Expenses incurred in travel or lodging beyond a 100 kilometre (60 mile) distance from the nearest DV Systems Authorized Service Centre.
- 7) Expenses incurred in the return of equipment for inspection purposes to the manufacturer's facility. All returns must be pre-authorized, returned 'Freight Prepaid', and accompanied by a 'Return Material Authorization (RMA) Number' (obtainable through DV Systems).
- 8) Products, parts, materials, components, or accessories manufactured by others or supplied in connection with the sale of the manufacturer's products.
- 9) Repair and transportation costs of merchandise determined not to be defective under the terms and conditions of this warranty.
- 10) The cost of rental or loaner equipment while the customer's original equipment is being assessed, repaired, or replaced.
- 11) Consequential damages in the event of product failure.

All decisions by DV Systems Inc. with regard to this policy shall be final. DV Systems will not be responsible for any claimed defective materials returned other than in accordance with this statement of policy or without our prior authorization.





DV Systems Inc. (Canada)
490 Welham Road
Barrie, Ontario, L4N 8Z4, Canada
Tel: (705) 728-5657
Fax: (705) 728-4974

DV Systems, Ltd. (USA)
128-B Talbert Road
Mooresville, NC, 28117, USA
Tel: (704) 799-0046
Fax: (704) 799-0355

MODEL NO.	HP	kW	PRESSURE PSI	PRESSURE bar	SCFM @ MAX. PRESSURE	m3/min @ MAX. PRESSURE	AIR END RPM	NOMINAL SOUND @ 1 METRE dBA	SYSTEM AMP 3-PHASE				WEIGHT LBS	WEIGHT kG
									200V	230V	460V	575V		
H40	40	29.8	100 - 110	6.9 - 8.3	165	4.67	3546	70	107	94	47	38	1660	753
			125 - 145	8.6 - 10.0	150	4.25	3085							
H50	50	37.3	100 - 110	6.9 - 8.3	200	5.66	4562	72	131	114	57	46	1680	762
			125 - 145	8.6 - 10.0	186	5.27	3960							

INSTALLATION REQUIREMENTS

1. MAINTAIN 1.5M (4FT) DISTANCE FROM WALLS AND OTHER OBJECTS FOR PURPOSE OF COOLING AND SERVICING
2. COMPRESSOR MUST BE LEVEL AND ANCHORED TO SOLID LEVEL FLOOR
3. AMBIENT CONDITIONS:
10°C (50°F) MIN. 40°C (104°F) MAX.

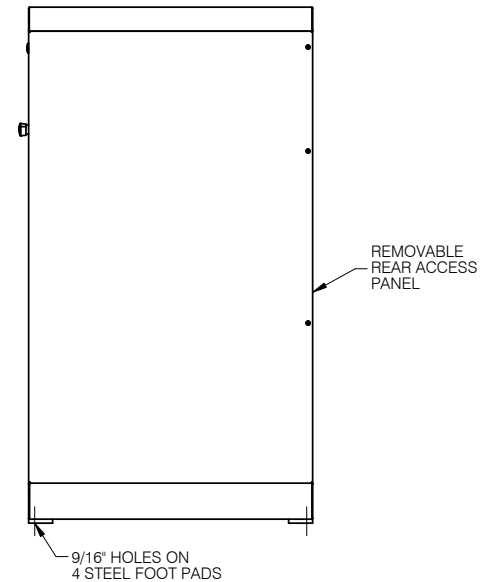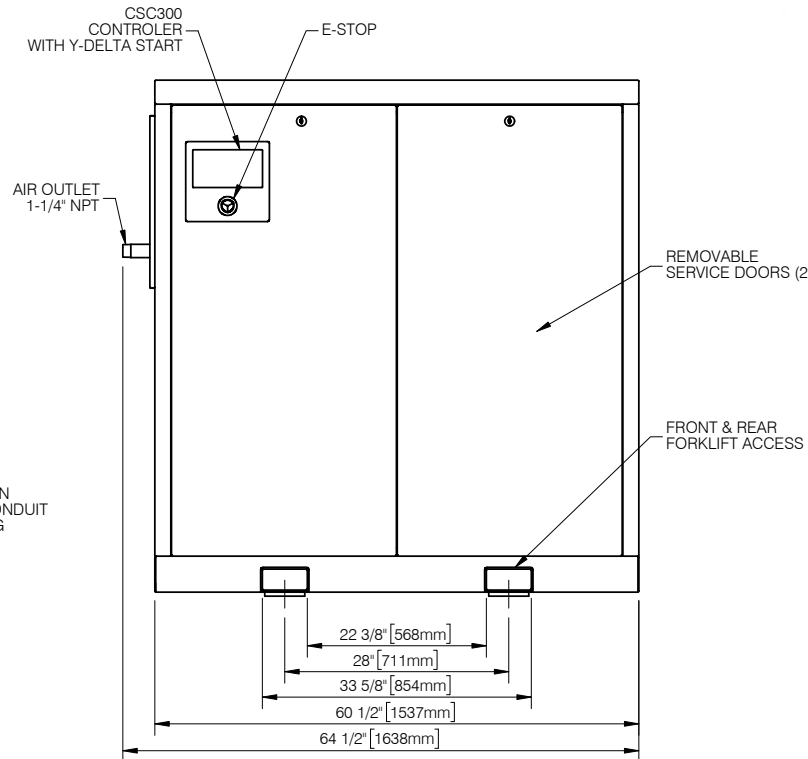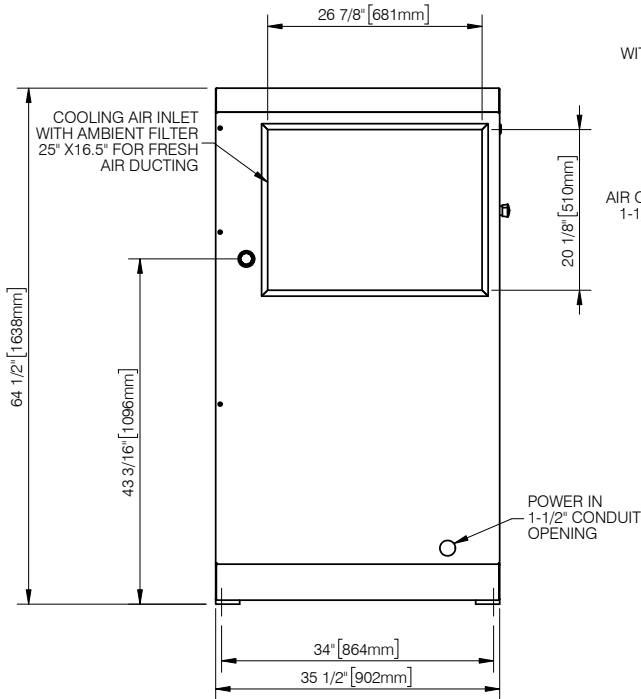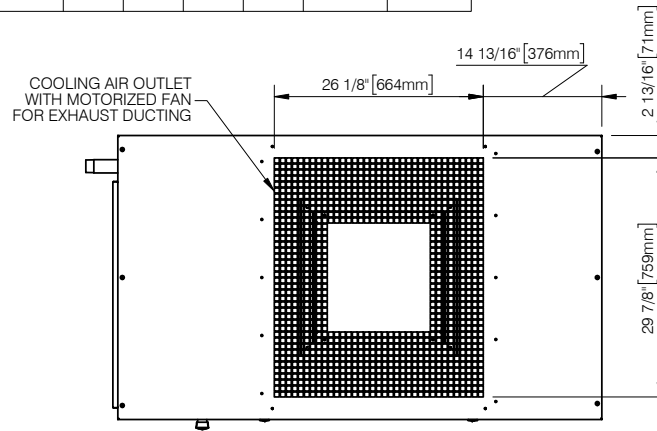

IMPORTANT NOTE: This print is the confidential property of DV SYSTEMS, INC. It is not to be used or reproduced in any manner, nor submitted to other parties for examination without the prior approval of DV SYSTEMS, INC. DV SYSTEMS, INC. is continually trying to improve its products, specifications subject to change without notice.







NAME OF PROJECT				DESCRIPTION OF DRAWING		
H40-50 SCREW COMPRESSOR				SALES-ENGINEERING DRAWING		
DRAWN BY	CHECKED BY	DATE	SCALE	DRAWING NO.	SHT NO	REV.
LT		7/31/17	N.T.S	H40 H50		

MODEL NO.	HP	kW	PRESSURE PSI	PRESSURE bar	SCFM	m3/min	NOMINAL SOUND @ 1 METRE	SYSTEM AMP 3-PHASE				WEIGHT LBS	WEIGHT KG
								200V	230V	460V	575V		
H50VSD	50	37.3	100	6.9	200	5.66	69	131	114	57	46	1700	771
			125	8.6	186	5.27							
			145	10.0	170	4.81							

INSTALLATION REQUIREMENTS

1. MAINTAIN 1.25M (4FT) DISTANCE FROM WALLS AND OTHER OBJECTS FOR PURPOSE OF COOLING AND SERVICING
2. COMPRESSOR MUST BE LEVEL AND ANCHORED TO SOLID LEVEL FLOOR
3. AMBIENT CONDITIONS:
10°C (50°F) MIN. 40°C (104°F) MAX.


VOLTAGE	PHASE	FUSE TYPE	FUSE AMP
200	3	J FAST-ACTING (DFJ/HSJ)	175
230			150
460			70
575			60

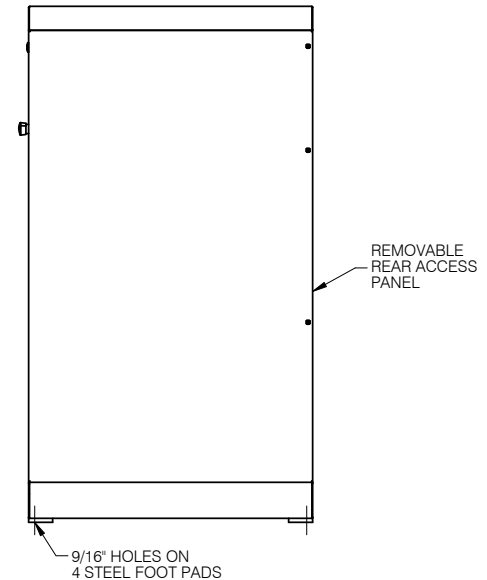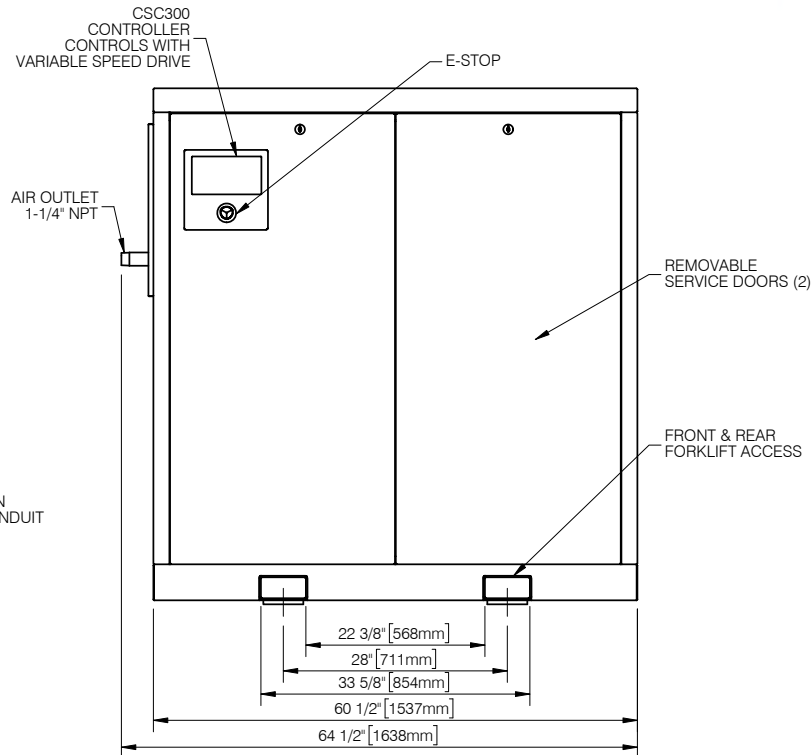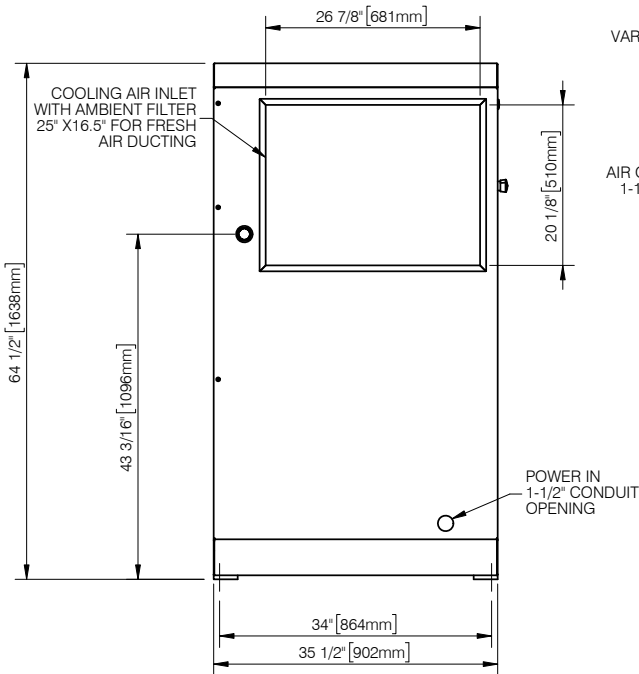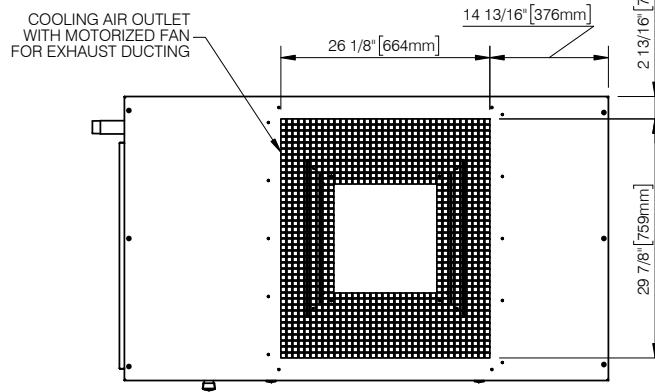

IMPORTANT NOTE: This print is the confidential property of DV SYSTEMS, INC. It is not to be used or reproduced in any manner, nor submitted to other parties for examination without the prior approval of DV SYSTEMS, INC. DV SYSTEMS, INC. is continually trying to improve its products, specifications subject to change without notice.



NAME OF PROJECT				DESCRIPTION OF DRAWING		
H50 SCREW COMPRESSOR				SALES-ENGINEERING DRAWING		
DRAWN BY	CHECKED BY	DATE	SCALE	DRAWING NO.	SHT NO	REV
LT		7/31/17	N.T.S	H50VSD		

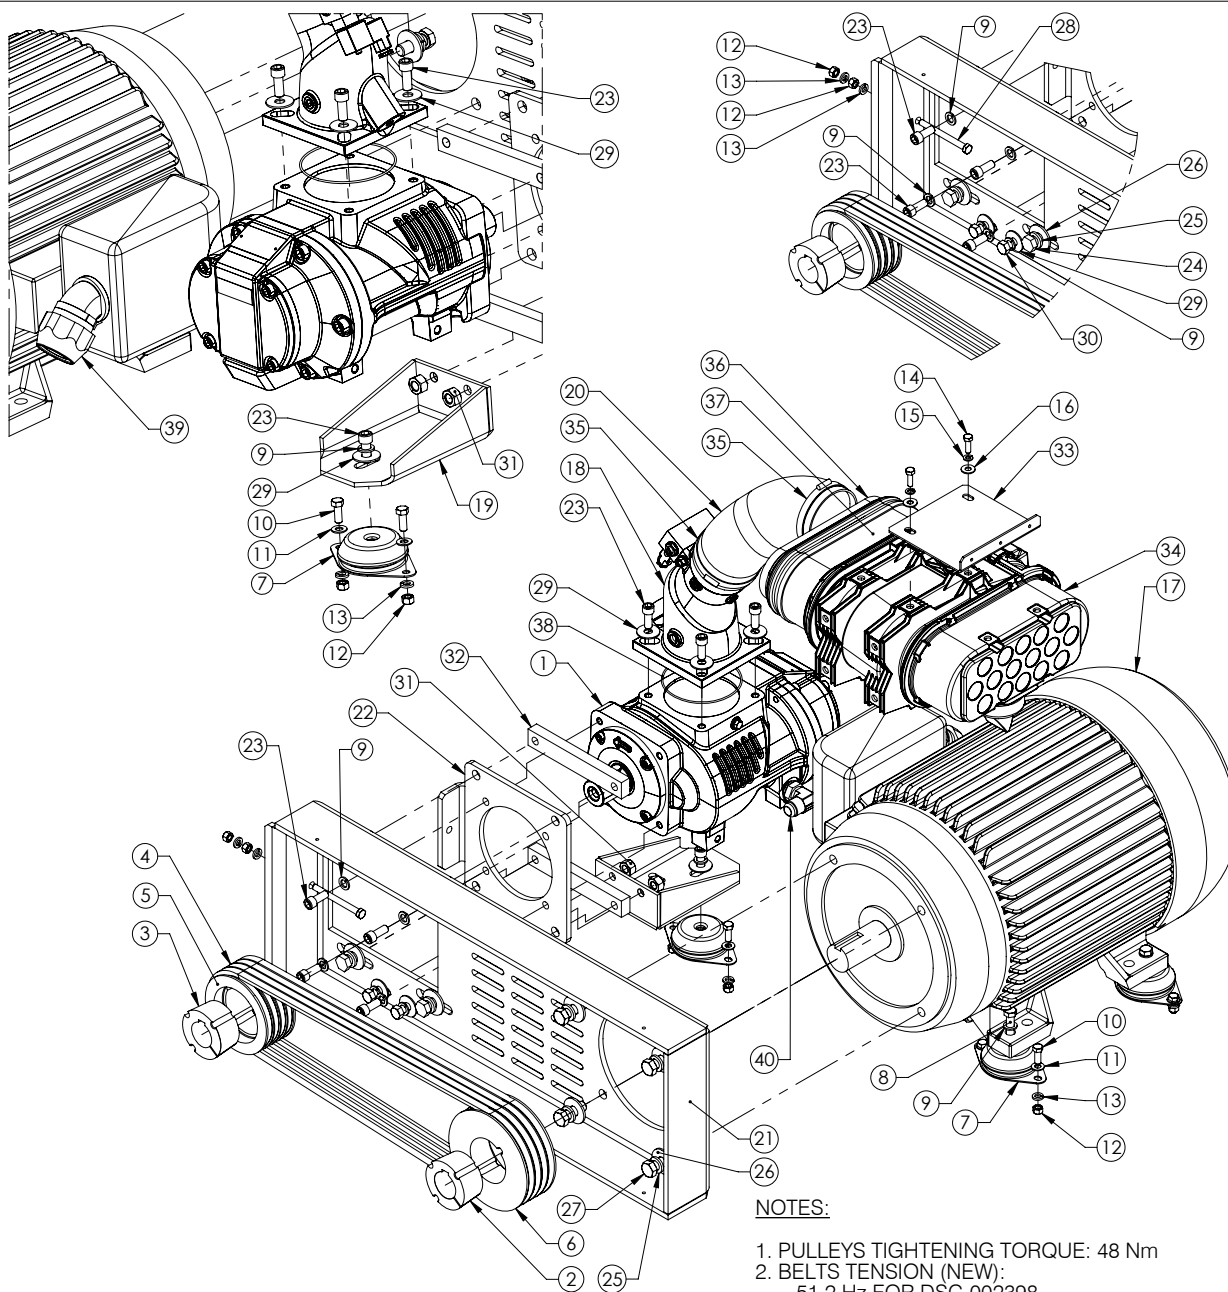

NOTES:

1. PULLEYS TIGHTENING TORQUE: 48 Nm
2. BELTS TENSION (NEW):
 - 51.2 Hz FOR DSC-002398
 - 47.9 Hz FOR DSC-002400 (H40-145)
 - 56.7 Hz FOR DSC-002229
 - 53.8 Hz FOR DSC-002400 (H50-145)

REV.	DATE	REVISION DESCRIPTION	PCN NO.
A	11/03/15	H50-145 PULLEY & BELTS	15-16
	9/03/13	NEW PROJECT	12-04

IMPORTANT NOTE: This print is the confidential property of DV SYSTEMS, INC. It is not to be used or reproduced in any manner, nor submitted to other parties for examination without the prior approval of DV SYSTEMS, INC. DV SYSTEMS, INC. is continually trying to improve its products, specifications subject to change without notice.




NO.	PART NUMBER	DESCRIPTION	QTY.
1	DSC-001980	H50 AIR END	1
2	DSC-001155	TAPER BUSHING FOR MOTOR PULLEY 1-7/8	1
3	DSC-002228	TAPER BUSHING FOR AIR END PULLEY 45 MM	1
4	DSC-002398 DSC-002229 DSC-002400	BELT H40 110 PSI (SPA1607 LD) BELT H50 110 PSI (XPA1607 LD) BELT H40-50 145 PSI (SPA632 LD)	4
5	PU-9255 PU-9272 PU-9268	AIR END PULLEY H40 110 PSI, H50 145 PSI AIR END PULLEY H40 145 PSI AIR END PULLEY H50 110 PSI	1
6	PU-9272 PU-9255 PU-9269	MOTOR PULLEY H40 110 PSI MOTOR PULLEY H40 145 PSI MOTOR PULLEY H50 110, 145 PSI	1
7	DSC-002010	H50 ISOLATOR	3
8	SS-10133	M12 X 45MM HHCS	2
9	SS-1506	1/2" MEDIUM LOCKWASHER	9
10	SS-25	3/8-16 X 1" HHCS GR2	6
11	SS-1525	3/8" FLAT WASHER	6
12	SS-657	3/8-16 HEX NUT	8
13	SS-1502	3/8" LOCKWASHER	8
14	SS-10105	M8 X 25MM HHCS	2
15	SS-1503	5/16" LOCKWASHER	2
16	SS-1524	5/16" FLAT WASHER	2
17	MO-9308 MO-9309 MO-9310 MO-9293 MO-9294 MO-9295	MOTOR 40HP, 200/60/3 MOTOR 40HP, 230/460 60/3 MOTOR 40HP, 575/60/3 MOTOR 50HP, 200/60/3 MOTOR 50HP, 230-460/60/3 MOTOR 50HP, 575/60/3	1
18	DSC-001986	H50 INTAKE VALVE	1
19	DSC-002233	AIR END BRACKET H50	1
20	DSC-002062	H50 & H40 BD AIR INLET DUCTING	1
21	DSC-002234	BELT GUARD H50	1
22	DSC-002235	AIR END PLATE H50	1
23	DSC-294	M12-1.75 X 30 SHCS	9
24	SS-81	5/8-11 X 1-3/4 HEX BOLT GR.5	4
25	SS-1508	5/8" MEDIUM LOCKWASHER	8
26	SS-1529	5/8" FLAT WASHER	8
27	DSC-261	5/8"-11 X 1-1/2 HEX BOLT GR 5	4
28	SS-33	3/8-16" X 4" HHCS	1
29	SS-1527	1/2" FLAT WASHER	7
30	SS-50	1/2-13 x 1.5" HHCS	2
31	SS-659	1/2-13 HEX NUT	2
32	DSC-002236	AIR END BAR H50	2
33	DSC-002013	H50 AIR FILTER BRACKET	1
34	DSC-002064	H50 INLET FILTER HOUSING W/FILTER	1
35	DSC-002063	H50 INTAKE FILTER CLAMP	2
36	DSC-002074	H50 AIR INLET SAFETY ELEMENT	1
37	DSC-002073	H50 INLET FILTER ELEMENT	1
38	DSC-001991	H50 INTAKE VALVE O-RING	1
39	DSC-001937	1-1/2" 45° PLASTIC CONNECTOR	1
40	DSC-002189	ELBOW-SWIVEL 3/4" BSPPM - JIC12	1

NAME OF PROJECT				DESCRIPTION OF DRAWING		
H40-50 BD SCREW COMPRESSOR				DRIVE COMPONENTS		
DRAWN BY		CHECKED BY	DATE	SCALE	DRAWING NO.	SHT NO/REV.
T.V.			9/03/13	N.T.S	H40-50 BD	D1 A

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	DSC-001672 DSC-001671 DSC-001992 DSC-001993	H50 INVERTER FR8 200V H50 INVERTER FR8 230V H50 INVERTER FR7 460V H50 INVERTER FR7 575V	1
2	MO-9293 MO-9294 MO-9295	MOTOR 50HP 200/60/3 MOTOR 50HP 230-460/60/3 MOTOR 50HP 575/60/3	1
3	DSC-001936	1-1/2" STRT PLACTIC CONNECTOR	1
4	DSC-001935	1-1/2" FLEX CONDUIT	21"
5	DSC-001937	1-1/2" 45° PLASTIC CONNECTOR	1
6	SS-10133	M12 X 45MM HHCS	2
7	SS-1506	1/2" MEDIUM LOCKWASHER	7
8	SS-13	5/16-18 X 7/8" HHCS	4
9	SS-1524	5/16" FLAT WASHER	6
10	SS-1503	5/16" LOCKWASHER	6
11	SS-725	5/16 HEX NUT	4

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
12	SS-25	3/8-16 X 1" HHCS GR2	6
13	SS-1525	3/8" FLAT WASHER	6
14	DSC-002010	H50 ISOLATOR	3
15	SS-1502	3/8" LOCKWASHER	6
16	SS-657	3/8-16 HEX NUT	6
17	DSC-001981	H50 MOTOR HUB	1
18	DSC-001983	H50 COUPLING SPIDER	1
19	DSC-001984	H50 COUPLING LOCKING RING	1
20	DSC-001982	H50 AIR END HUB	1
21	DSC-001985	H50 MOTOR - AIR END ADAPTER	1

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
22	SS-1508	5/8" MEDIUM LOCKWASHER	4
23	SS-81	5/8-11 X 1-3/4 HEX BOLT GR.5	4
24	DSC-244	M12 HC LOCKWASHER	4
25	DSC-294	M12-1.75 X 30 SHCS	13
26	DSC-002012	ADAPTER GUARD	2
27	SS-1	1/4-20 X 0.5" HHCS	4
28	DSC-002011	H50 AIR END BRACKET	1
29	SS-1527	1/2" FLAT WASHER	9
30	DSC-001980	H50 AIR END	1
31	DSC-001991	H50 INTAKE VALVE O-RING	1
32	DSC-001986	H50 INTAKE VALVE	1
33	DSC-002063	H50 INTAKE FILTER CLAMP	2
34	DSC-002062	H50 AIR INLET DUCTING	1
35	DSC-002064	H50 INLET FILTER HOUSING W/FILTER	1
36	SS-10105	M8 X 25MM HHCS	2
37	DSC-002013	H50 AIR FILTER BRACKET	1

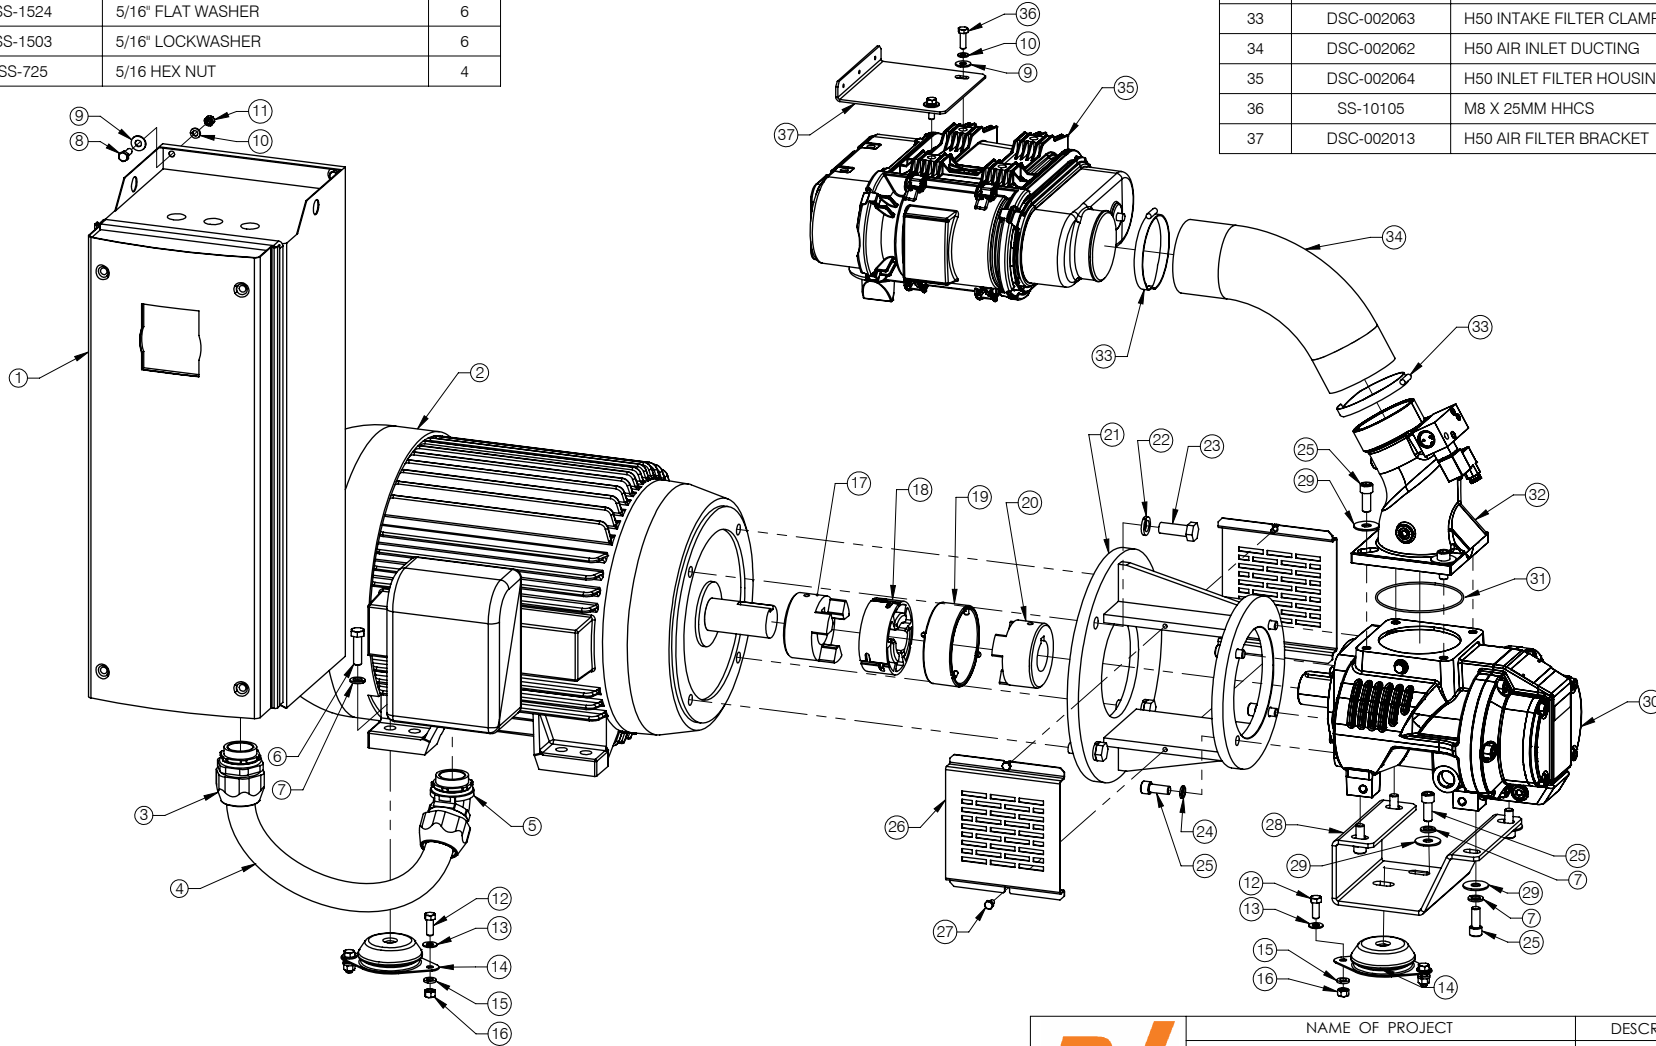

REV.	DATE	REVISION DESCRIPTION	PCN NO.
A	12/16/13	DSC-002077.78 REMOVED, 001935.36 ADDED	---


IMPORTANT NOTE: This print is the confidential property of DV SYSTEMS, INC. It is not to be used or reproduced in any manner, nor submitted to other parties for examination without the prior approval of DV SYSTEMS, INC. DV SYSTEMS, INC. is continually trying to improve its products, specifications subject to change without notice.



NAME OF PROJECT				DESCRIPTION OF DRAWING		
H50VSD SCREW COMPRESSOR				DRIVE COMPONENTS		
DRAWN BY	CHECKED BY	DATE	SCALE	DRAWING NO.	SHT NO	REV.
LT		2/14/12	N.T.S	H50VSD	D1	A

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	DSC-001980	AIR END H-SERIES	1
2	DSC-001986	INTAKE VALVE H-SERIES	1
3	DSC-002052	SOLENOID GH-SERIES N.C.	1
4	DSC-376	PNEUMATIC ELBOW 1/8"BSPP X 8MM	1
5	DSC-002209	INTAKE VALVE CNTRL BLOCK GH-SERIES	1
6	DSC-381	PNEUMATIC TUBE BLACK 8MM OD	2
7	DSC-110	PNEUMATIC TEE 1/4"BSPP X 8MM	1
8	DSC-712	THERMO VALVE CAP	1
9	DSC-711	THERMO VALVE CAP O-RING	1
10	DSC-120	BONDED WASHER 3/4" BSPP	3
11	DSC-427	BONDED WASHER 3/8"	4
12	DSC-279	ADAPTER 3/8"BSPPM - 3/8"NPTF	1
13	DSC-436	ADAPTER 3/8"NPTM X 1/2"NPTF	1
14	TIA-6165	SAFETY VALVE 1/2"NPT 165PSI	1
15	DSC-002881	MANIFOLD ASSEMBLY G-SERIES II	1
16	DSC-278	ADAPTER 3/8"BSPPM X 1/4"BSPP	2
17	DSC-382	PNEUMATIC TUBE NATURAL 6MM OD	1
18	DSC-175	PNEUMATIC STRAIGHT 1/8" X 6MM	2
19	DSC-001358	CHECK VALVE 1/8"NPT(F)	1
20	DSC-612	INLINE FILTER	1
21	DSC-002904	SOLENOID CABLE ASSEMBLY HJK	1
22	DSC-001237	PRESSURE TRANSDUCER CSC200300	1
23	DSC-377	PNEUMATIC ELBOW 1/4"BSPP X 8MM	1
24	DSC-158	PNEUMATIC ELBOW 1/4"BSPP X 6MM	1
25	DSC-121	ADAPTER R3/4" - JIC12	3

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
26	DSC-002958	PLUG 1/4"BSPP	1
27	DSC-001217	BONDED WASHER 1/4" BSPP	2
28	DSC-102*	ANTI-ROTATION PRESSURE SWITCH	1
29	DSC-426*	ADAPTER 3/8"BSPPM - 1/4"NPTF	1
30	DSC-185	PNEUMATIC ELBOW 1/8"BSPP X 6MM	1
31	DSC-677	ORIFICE 1MM	1
32	DSC-001667	COPPER SEALING RING 1/8"BSPP	3
33	DSC-002059	BONDED WASHER M14	1
34	DSC-002066	THERMAL WELL H50	1
35	DSC-002907	TEMPERATURE SENSOR CSC200300 HJKN	1

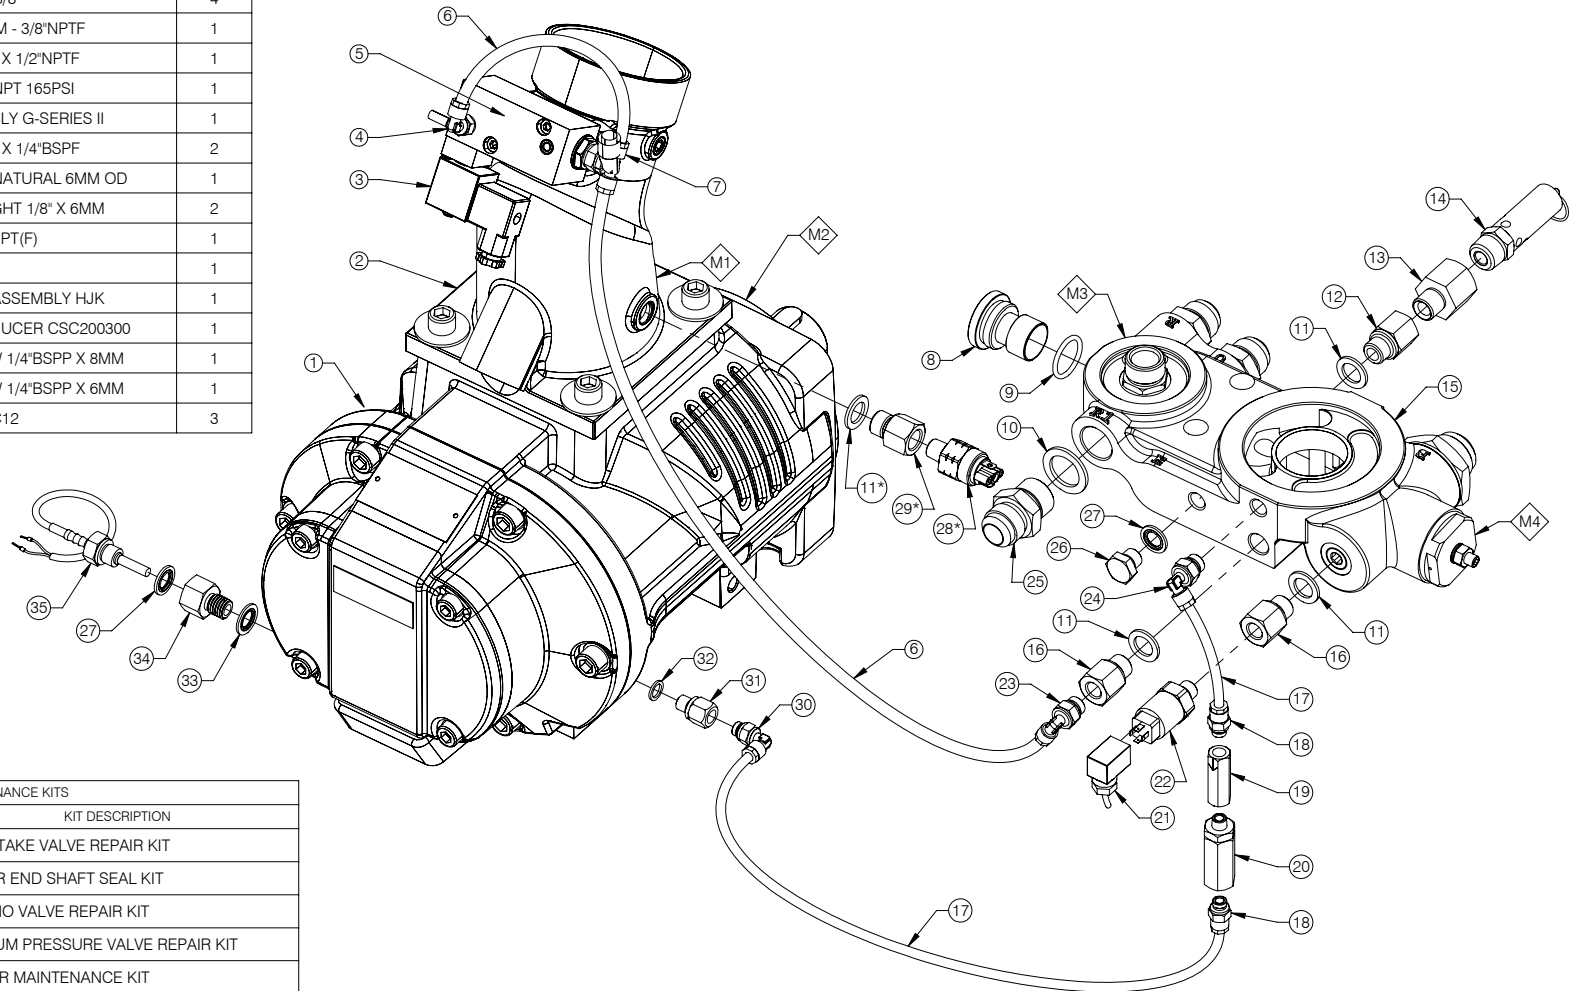

MAINTENANCE KITS		
M NO.	PART NO.	KIT DESCRIPTION
M1	DSC-002075	H50 INTAKE VALVE REPAIR KIT
M2	DSC-002076	H50 AIR END SHAFT SEAL KIT
M3	DSC-111-1	THERMO VALVE REPAIR KIT
M4	DSC-231	MINIMUM PRESSURE VALVE REPAIR KIT
---	MK-H50	4000 HR MAINTENANCE KIT

IMPORTANT NOTE: This print is the confidential property of DV SYSTEMS, INC. It is not to be used or reproduced in any manner, nor submitted to other parties for examination without the prior approval of DV SYSTEMS, INC.

B	3/01/17	DSC-002881 MANIFOLD & PARTS SN > 085501	17-04
A	6/26/14	BD-VSD COMBINED, ANTY-ROTATION PARTS FOR REF	14-15
REV.	DATE	REVISION DESCRIPTION	PCN NO.




NAME OF PROJECT				DESCRIPTION OF DRAWING	
H40-50 SCREW COMPRESSOR				PNEUMATIC COMPONENTS	
DRAWN BY	CHECKED BY	DATE	SCALE	DRAWING NO.	SHT NO/REV.
LT		3/01/17	N.T.S	H40-50 BD H50VSD	D3 B

MAINTENANCE KITS		
M1	DSC-002075	H50 INTAKE VALVE REPAIR KIT
M2	DSC-111-1	THERMO VALVE REPAIR KIT
M3	DSC-231	MINIMUM PRESSURE VALVE REPAIR KIT
---	MK-H50	4000 HR MAINTENANCE KIT

NO.	PART NUMBER	DESCRIPTION	QTY.
1	DSC-001980	AIR END H-SERIES	1
2	DSC-002065	H50 AIR END OUTLET GASKET	1

NO.	PART NUMBER	DESCRIPTION	QTY.
3	DSC-002189	ELBOW-SWIVEL 3/4"BSPPM - JIC12	1
4	DSC-002063	H50 INTAKE FILTER CLAMP	2
5	DSC-002062	H50 AIR INLET DUCTING	1
6	DSC-002074	H50 AIR INLET SAFETY ELEMENT	1
7	DSC-002073	H50 INLET FILTER ELEMENT	1
8	DSC-002064	H50 INLET FILTER HOUSING W/FILTER	1
9	DSC-121	ADAPTER R3/4" - JIC12	5
10	DSC-120	BONDED WASHER 3/4" BSPP	6
11	DSC-155	HEAT EXCHANGER	1
12	DSC-002046	OIL RETURN HOSE TO MANIFOLD	1
13	DSC-001346	OIL OUTLET HOSE TO HEAT EXCHANGER	1
14	DSC-002047	AIR OUTLET HOSE TO HEAT EXCHANGER	1
15	DSC-123	ADAPTER 1-1/4"BSPP(M) - JIC 16	2
16	DSC-122	BONDED WASHER 1-1/4"BSPP	2
17	DSC-002724	O-RING C-SERIES THERMOVALVE INLET	1
18	SS-725	5/16" HEX NUT	6
19	SS-1503	5/16" LOCKWASHER	6
20	SS-1524	5/16" FLAT WASHER	12
21	SS-13	5/16-18 X 7/8 HHCS	6
22	DSC-002015	H50 FAN PLATE	1
23	DSC-001987	H50 FAN ASSEMBLY 575V	1
24	SS-657	3/8-16 HEX NUT	7
25	SS-1502	3/8" LOCKWASHER	7
26	DSC-597	1/4-20 X 0.75" HHCS	8
27	SS-1505	1/4" MEDIUM LOCKWASHER	8
28	SS-02001	1/4-20 THREADED INSERT	8
29	DSC-002067	EXHAUST PIPE 24", 1-1/4"NPT TAP ENDS	1
30	SS-23	3/8-16 X 3/4 HHCS B/M	4
31	DSC-002881	MANIFOLD ASSEMBLY G-SERIES II	1
32	DSC-624	OIL FILTER	1
33	DSC-002051	H50 AIR/OIL SEPARATOR FILTER	1
34	DSC-002068	H50 SEPARATOR TUBE	1
35	DSC-288	MANIFOLD ASSEMBLY O-RING	1
36	DSC-628	MANIFOLD SCAVENGE LINE O-RING	1
37	SS-01926	3/8-16 X 1-3/4 SHCS	4
38	DSC-001667	COPPER SEALING RING 1/8"BSPP	2
39	DSC-002882	O-RING G-SERIES A/O INLET	1
40	DSC-618	OIL FILL PLUG 3/4" BSPP	1
41	DSC-001907	OIL SIGHT GLASS 3/4" BSPP	1
42	DSC-002259	COPPER WASHER 3/4"BSPP WD	1
43	SS-1525	3/8" FLAT WASHER	3
44	R-8504	PE TUBING 1/2" OD	1
45	DD-00091	3/8"NPT X 1/2"DIA PNEU. FITTING	1
46	DSC-002828	BALL VALVE 3/8" NPTF X 3/8" NPTF	1
47	DSC-163	STREET ELBOW 3/8" NPT	1
48	SS-2108	NIPPLE 3/8"NPT X 2" LG	1
49	DSC-001330	VIBRATION ISOLATOR	3
50	DSC-001393-2	AIR/OIL RECEIVER G-SERIES II	1
51	DSC-002918	FLEXI-HOSE H40-50 FIXED SPEED	1
52	DSC-002898	FLEXI-HOSE H50VSD	1
53	DSC-244	M12 HC LOCKWASHER	8
54	DSC-245	M12 X 40MM SHCS	4
55	DSC-002048 (VSD) DSC-002278 (BELT-DR)	OIL RETURN HOSE TO AIR END	1
56	DSC-294	M12-1.75 X 30 SHCS	8
57	DSC-001146	G20-30 FLEXI HOSE GASKET	1

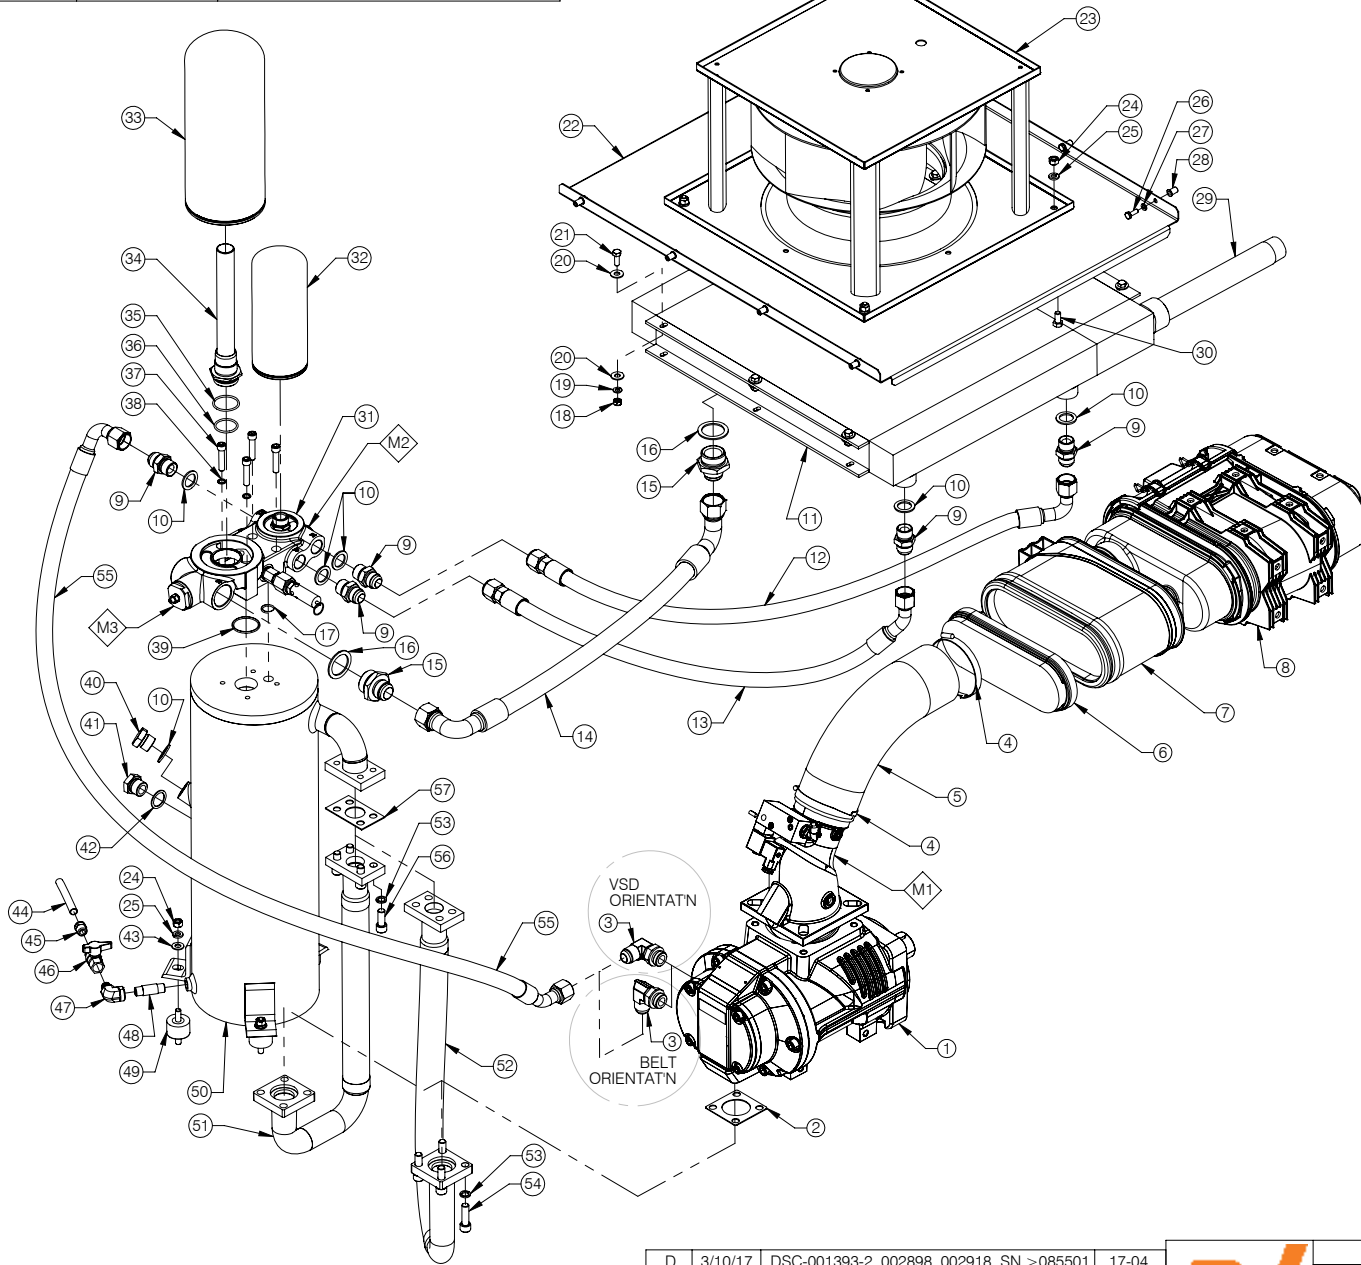


REV.	DATE	REVISION DESCRIPTION	PCN NO.
D	3/10/17	DSC-001393-2, 002898, 002918, SN.>085501	17-04
C	10/27/16	DSC-002940 ADDED	16-20
B	7/21/15	OIL DRAIN ASSEMBLY PARTS	15-05
A	6/18/14	MANIFOLD O-RINGS	---



NAME OF PROJECT				DESCRIPTION OF DRAWING	
H50 VSD SCREW COMPRESSOR				SYSTEM COMPONENTS	
DRAWN BY	CHECKED BY	DATE	SCALE	DRAWING NO.	SHT NO/REV.
LT		1/31/12	N.T.S	H40-50 BD H50VSD	D2 D

IMPORTANT NOTE: This print is the confidential property of DV SYSTEMS, INC. It is not to be used or reproduced in any manner, nor submitted to other parties for examination without the prior approval of DV SYSTEMS, INC. DV SYSTEMS, INC. is continually trying to improve its products, specifications subject to change without notice.

POWER CIRCUIT SCHEMATIC

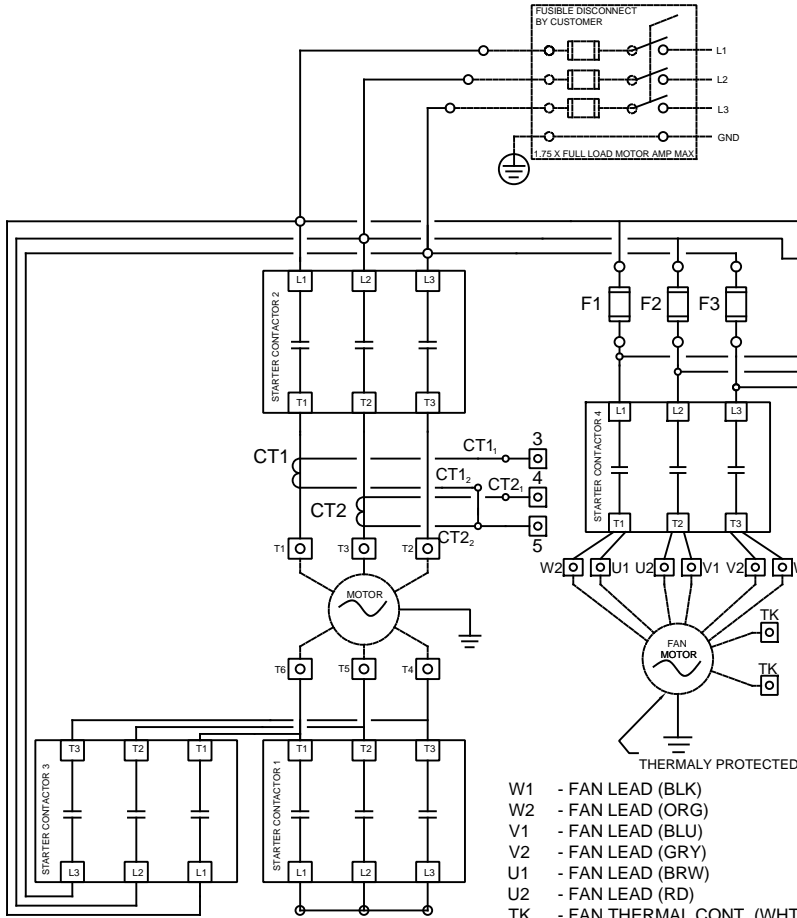


VOLTAGE		FUSE TABLE						
HP	ATOR, CC	ATOR, CC TIME DELAY			SMM TIME DELAY			
		F1	F2	F3	F4	F5	F6	NA
200	40	4	4	4	3	3	7	NA
	50						7	NA
230	40	4	4	4	2	2	7	NA
	50						7	NA

WARNING: USE THE SAME FUSE TYPE & RATING

REV.	DATE	REVISION DESCRIPTION	PCN NO.
D	06/17/16	RSS INSTRUCTIONS UPDATED	---
E	04/26/17	TRANSFORMER FUSE RATING CHANGED	---

- E - EMERGENCY STOP
- CT1 - CURRENT SENSOR #1
- CT2 - CURRENT SENSOR #2
- F1 - FAN FUSE #1
- F2 - FAN FUSE #2
- F3 - FAN FUSE #3
- F4/F5 - TRANSFORMER PRI. FUSE
- F6 - TRANSFORMER SEC. FUSE
- M1 - STARTER COIL 1
- M2 - STARTER COIL 2
- M3 - STARTER COIL 3
- M4 - FAN STARTER COIL
- P - PRESSURE TRANSDUCER
- S - SOLENOID N.C.
- T - TEMPERATURE SENSOR
- RSS - REMOTE START/STOP, N/O (FIELD OPTION: INSTALL RSS TO #21 AND #13 TERMINAL BLOCK. INSTALL WIRE FROM #21 TO DI5. ON P18 CHANGE P18.08 FROM 'OFF' TO 'DI REMOTE START'. ON P10 CHANGE P10.12 FROM 'KEYPAD' TO 'EQUIPMENT DI'.)

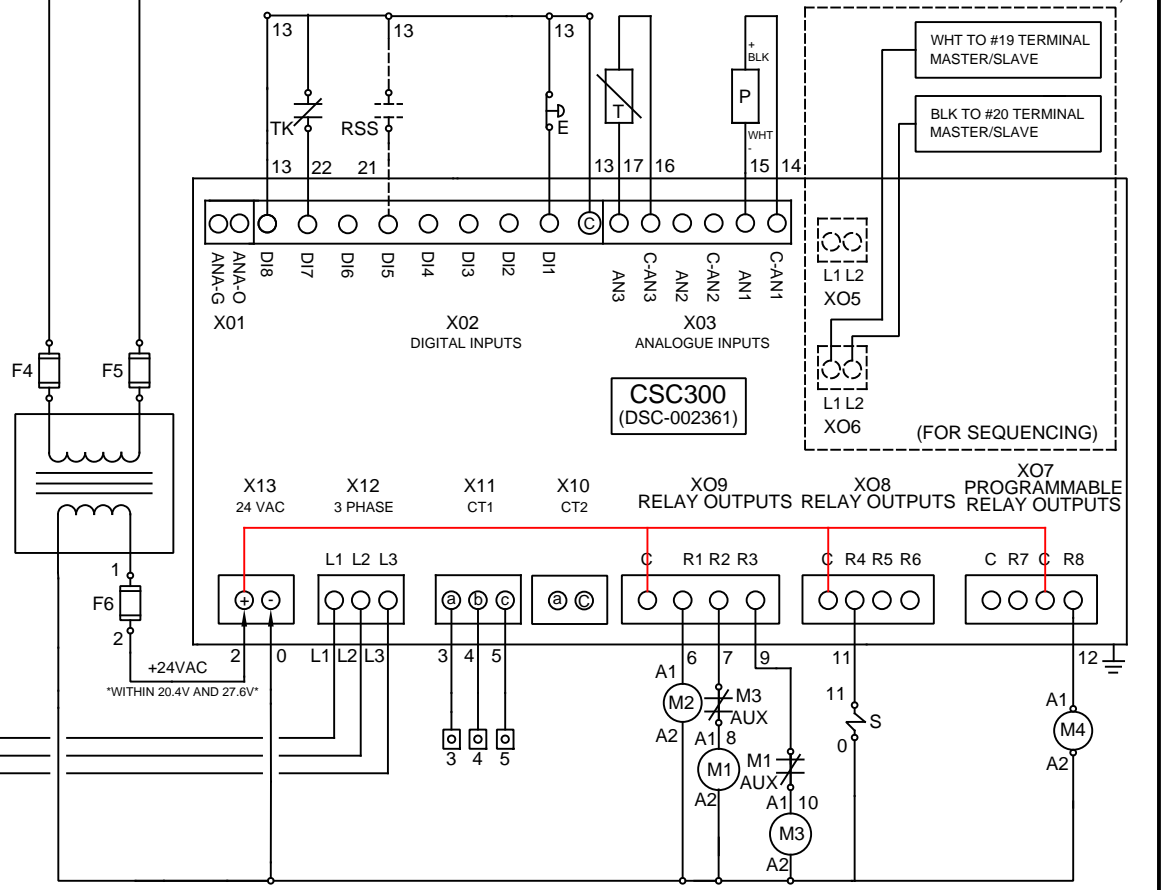

- W1 - FAN LEAD (BLK)
- W2 - FAN LEAD (ORG)
- V1 - FAN LEAD (BLU)
- V2 - FAN LEAD (GRY)
- U1 - FAN LEAD (BRW)
- U2 - FAN LEAD (RD)
- TK - FAN THERMAL CONT. (WHT)

- PANEL SCHEMATIC
- 1 JUNCTION BLOCK
 - 2 FAN FUSES F1, F2, F3
 - 3 PRIMARY FUSES F4, F5
 - 4 TRANSFORMER
 - 5 SECONDARY FUSES F3
 - 6 TERMINAL BLOCK
 - 7 MOTOR STARTERS
 - 8 CURRENT SENSOR
 - 9 FAN STARTER



IMPORTANT NOTE: This print is the confidential property of DV SYSTEMS, INC. It is not to be used or reproduced in any manner, nor submitted to other parties for examination without the prior approval of DV SYSTEMS, INC. DV SYSTEMS, INC. is continuously trying to improve its products, specifications subject to change without notice.

FRACTIONAL DIMENSIONS: ±1/32
 DECIMAL DIMENSION: ±.005
 ANGLES: ±1°
 *UNLESS OTHERWISE SPECIFIED



NAME OF PROJECT				DESCRIPTION OF DRAWING		
H-SERIES FIXED SPEED COMPRESSOR WITH CSC300 (200V & 230V)				ELECTRICAL SCHEMATICS WITH MICROPROCESSOR		
DRAWN BY		CHECKED BY	DATE	SCALE	DRAWING NO.	SHT NO/REV
EH			05/14/15	N.T.S.	CSC300H-200/230	E

POWER CIRCUIT SCHEMATIC

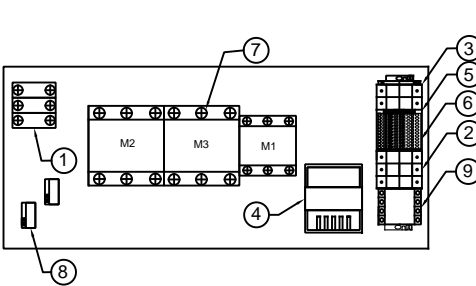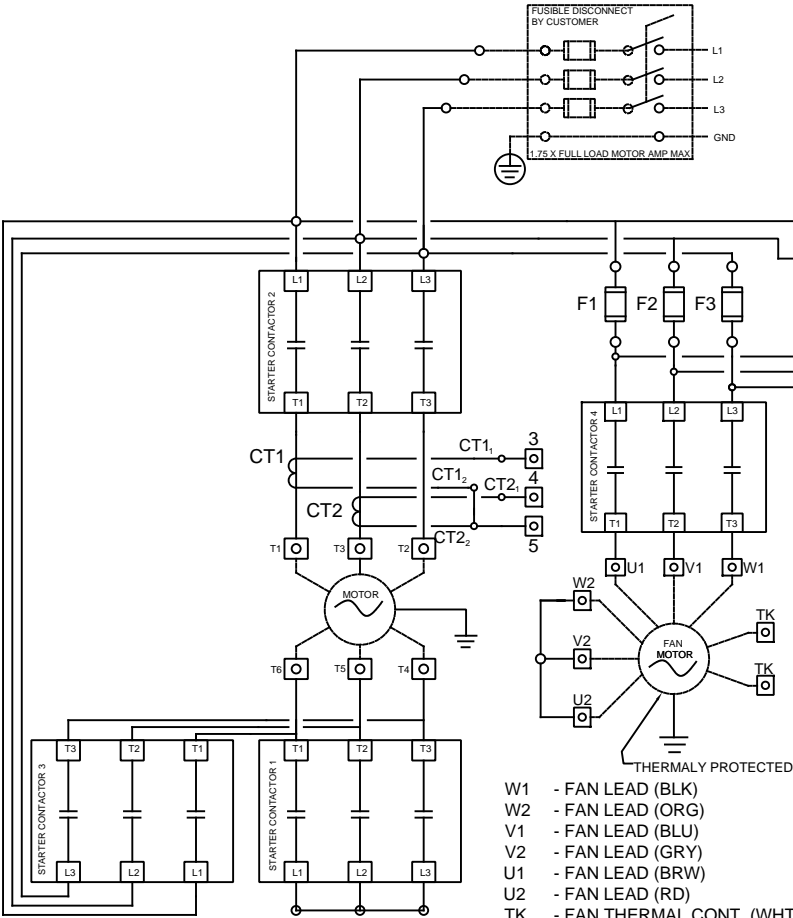


IMPORTANT NOTE: This print is the confidential property of DV SYSTEMS, INC. It is not to be used or reproduced in any manner, nor submitted to other parties for examination without the prior approval of DV SYSTEMS, INC. DV SYSTEMS, INC. is continuously trying to improve its products, specifications subject to change without notice.

		FUSE TABLE					
VOLTAGE	HP	ATOR, CC TIME DELAY			ATOR, CC		SMM TIME DELAY
		F1	F2	F3	F4	F5	
460	40	2.5	2.5	2.5	1	1	7 NA
	50						7 NA
575	40	2	2	2	1	1	5 NA
	50						7 NA

WARNING: USE THE SAME FUSE TYPE & RATING

REV.	DATE	REVISION DESCRIPTION	PCN NO.
E	06/17/16	RSS INSTRUCTIONS UPDATED	---
F	04/26/17	TRANSFORMER FUSE RATING CHANGED	---

- E - EMERGENCY STOP
- CT1 - CURRENT SENSOR #1
- CT2 - CURRENT SENSOR #2
- F1 - FAN FUSE #1
- F2 - FAN FUSE #2
- F3 - FAN FUSE #3
- F4/F5 - TRANSFORMER PRI. FUSE
- F6 - TRANSFORMER SEC. FUSE
- M1 - STARTER COIL 1
- M2 - STARTER COIL 2
- M3 - STARTER COIL 3
- M4 - FAN STARTER COIL
- P - PRESSURE TRANSDUCER
- S - SOLENOID N.C.
- T - TEMPERATURE SENSOR
- RSS - REMOTE START/STOP, N/O (FIELD OPTION: INSTALL RSS TO #21 AND #13 TERMINAL BLOCK. INSTALL WIRE FROM #21 TO DI5. ON P18 CHANGE P18.08 FROM 'OFF' TO 'DI REMOTE START'. ON P10 CHANGE P10.12 FROM 'KEYPAD' TO 'EQUIPMENT DI'.)
- X07 - R7 AND R8 FOR ROGRAMMABLE

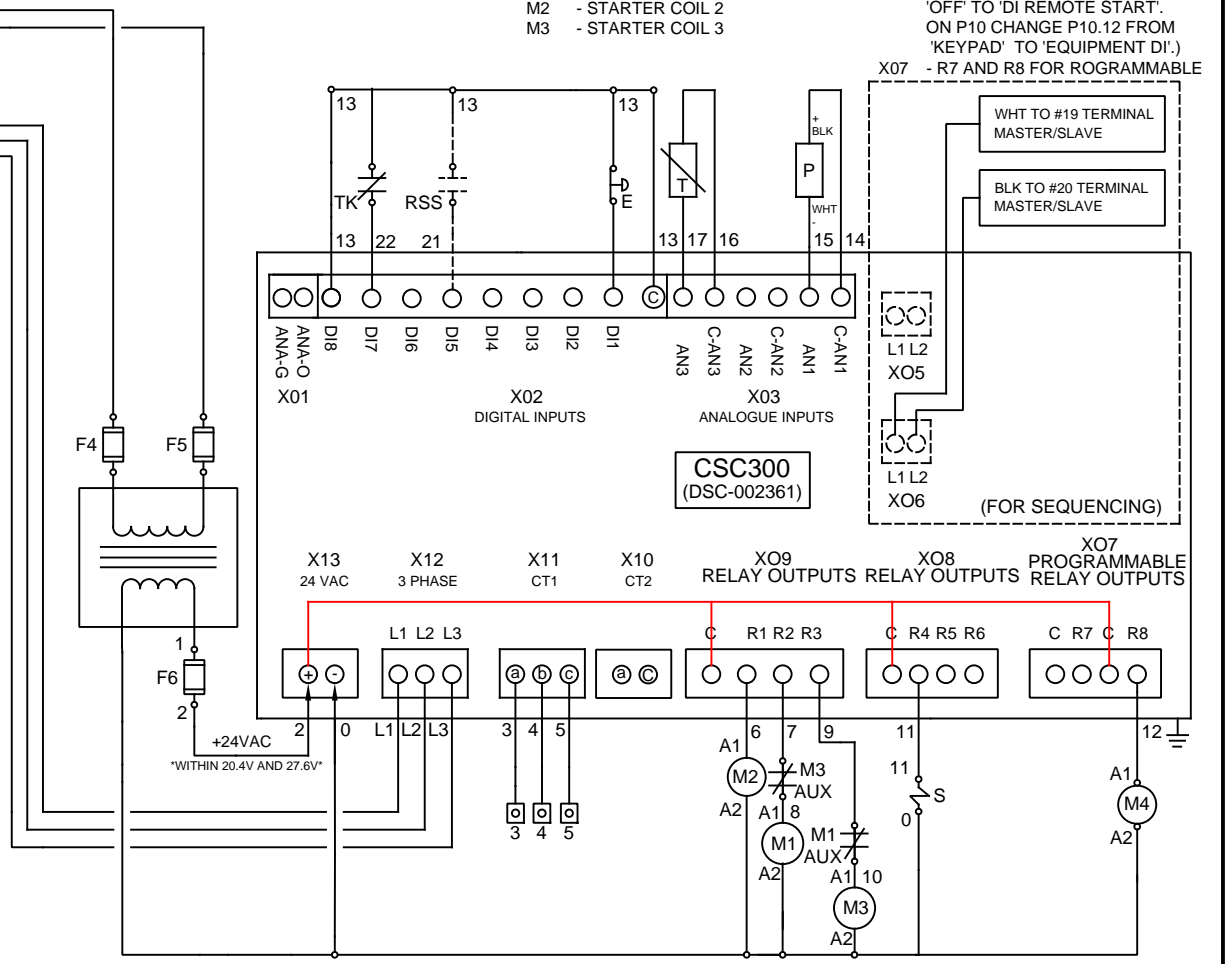


- W1 - FAN LEAD (BLK)
- W2 - FAN LEAD (ORG)
- V1 - FAN LEAD (BLU)
- V2 - FAN LEAD (GRY)
- U1 - FAN LEAD (BRW)
- U2 - FAN LEAD (RD)
- TK - FAN THERMAL CONT. (WHT)

- PANEL SCHEMATIC**
- ① JUNCTION BLOCK
 - ② FAN FUSES F1, F2, F3
 - ③ PRIMARY FUSES F4, F5
 - ④ TRANSFORMER
 - ⑤ SECONDARY FUSES F3
 - ⑥ TERMINAL BLOCK
 - ⑦ MOTOR STARTERS
 - ⑧ CURRENT SENSOR
 - ⑨ FAN STARTER

	NAME OF PROJECT				DESCRIPTION OF DRAWING			
	H-SERIES FIXED SPEED COMPRESSOR WITH CSC300 (460V & 575V)				ELECTRICAL SCHEMATICS WITH MICROPROCESSOR			
	DRAWN BY	CHECKED BY	DATE	SCALE	DRAWING NO.	SHT NO	REV	
EH		05/14/15	N.T.S.	CSC300H-460/575		F		

REV.	DATE	REVISION DESCRIPTION	PCN NO.
F	03/17/17	PANEL SCHEMATIC NUMBERING	--
G	04/28/17	TRANSFORMER FUSE RATING UPDATED	--

POWER CIRCUIT SCHEMATIC

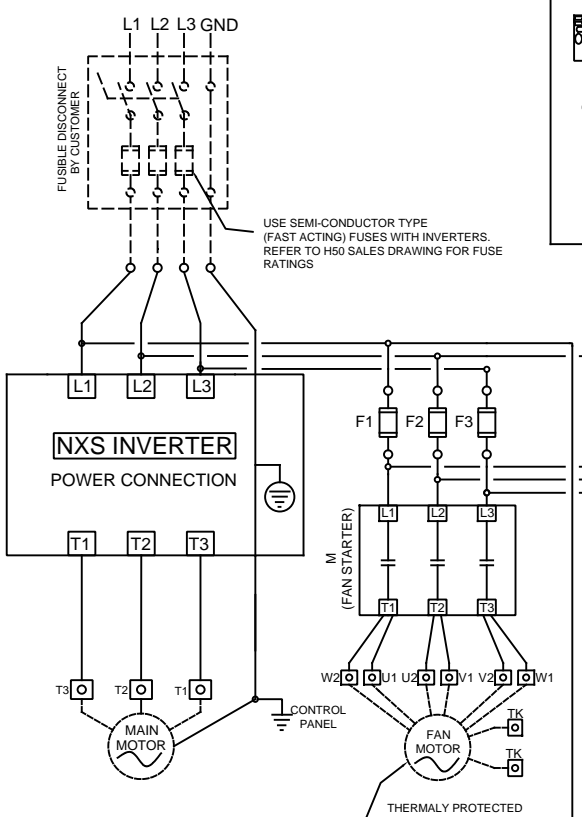


USE SEMI-CONDUCTOR TYPE (FAST ACTING) FUSES WITH INVERTERS. REFER TO H50 SALES DRAWING FOR FUSE RATINGS

- W1 - FAN LEAD (BLACK)
- W2 - FAN LEAD (ORANGE)
- V1 - FAN LEAD (BLUE)
- V2 - FAN LEAD (GREY)
- U1 - FAN LEAD (BROWN)
- U2 - FAN LEAD (RED)
- TK - FAN THERMAL CONTACTS (WHITE)

VOLTAGE	FUSE TABLE						
	FUSE SIZE (AMPS)						
	ATDR, CC TIME DELAY		ATOR, CC		5MM TIME DELAY		
	F1	F2	F3	F4	F5	F6	F7
200	4	4	4	1.5	1.5	5	NA
230	4	4	4	1	1	5	NA


WARNING: USE THE SAME FUSE TYPE & RATING

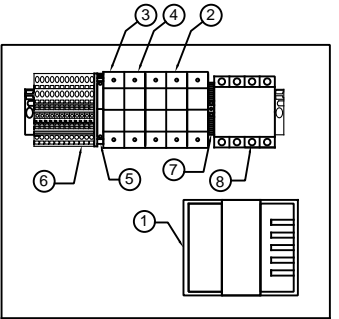

PANEL SCHEMATIC

- ① TRANSFORMER
- ② FAN FUSES F1 / F2 / F3
- ③ PRIMARY FUSE F4
- ④ PRIMARY FUSE F5
- ⑤ SECONDARY FUSE F6
- ⑥ TERMINAL BLOCK
- ⑦ GROUND TERMINAL BLOCK
- ⑧ STARTER CONTACTOR

- E - EMERGENCY STOP
- F1 - FAN FUSE #1
- F2 - FAN FUSE #2
- F3 - FAN FUSE #3
- F4/F5 - TRANSFORMER PRI. FUSE
- F6 - TRANSFORMER SEC. FUSE
- E - EMERGENCY STOP
- P - PRESSURE TRANSDUCER
- S - SOLONOID N.C.
- M - FAN STARTER
- T - TEMPERATURE SENSOR
- TK - FAN THERMAL CONTACT
- RSS - REMOTE START/STOP (FIELD OPTION: INSTALL RSS TO #18 AND #10 TERMINAL BLOCK. INSTALL WIRE FROM #18 TO DI5. ON P18 CHANGE P18.08 FROM 'OFF' TO 'DI REMOTE START'. ON P10 CHANGE P10.12 FROM 'KEYPAD' TO 'EQUIPMENT DI')
- X07 - R7 AND R8 FOR PROGRAMMABLE RELAY OUTPUT FUNCTION

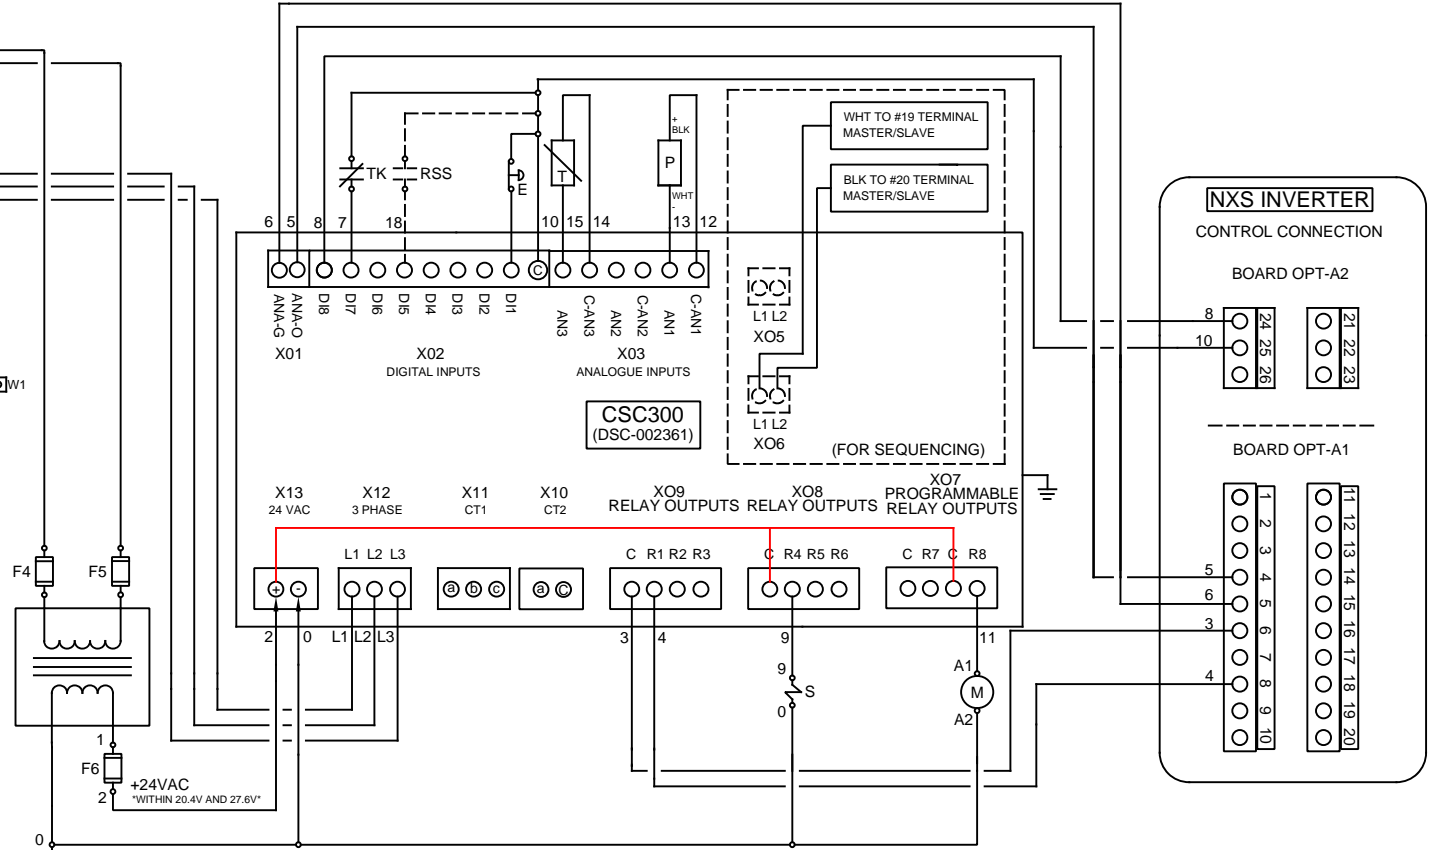

IMPORTANT NOTE: This print is the confidential property of DV SYSTEMS, INC. It is not to be used or reproduced in any manner, nor submitted to other parties for examination without the prior approval of DV SYSTEMS, INC. DV SYSTEMS, INC. is continuously trying to improve its products, specifications subject to change without notice.


FRACTIONAL DIMENSIONS: ±1/32
 DECIMAL DIMENSION: ±.005
 ANGLES: ±1°
 *UNLESS OTHERWISE SPECIFIED



NAME OF PROJECT				DESCRIPTION OF DRAWING			
H50 200V & 230V SCREW COMPRESSOR WITH VARIABLE SPEED CONTROLS				ELECTRICAL SCHEMATICS CSC300 & NXS INVERTER			
DRAWN BY		CHECKED BY		DATE		SCALE	
E.H				05/06/15		N.T.S.	
				DRAWING NO.		SHT NO/REV	
				CSC300-H50-200/230		G	

REV.	DATE	REVISION DESCRIPTION	PCN NO.
G	03/17/17	PANEL SCHEMATIC NUMBERING	--
H	04/27/17	TRANSFORMER FUSE RATING CHANGED	--

POWER CIRCUIT SCHEMATIC

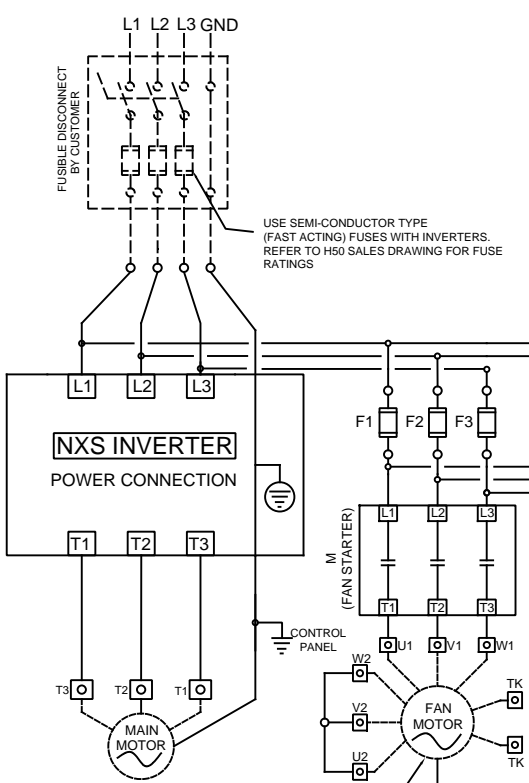


USE SEMI-CONDUCTOR TYPE (FAST ACTING) FUSES WITH INVERTERS. REFER TO H50 SALES DRAWING FOR FUSE RATINGS

- W1 - FAN LEAD (BLACK)
- W2 - FAN LEAD (ORANGE)
- V1 - FAN LEAD (BLUE)
- V2 - FAN LEAD (GREY)
- U1 - FAN LEAD (BROWN)
- U2 - FAN LEAD (RED)
- TK - FAN THERMAL CONTACTS (WHITE)

VOLTAGE	FUSE TABLE							
	FUSE SIZE (AMPS)							
	ATDR, CC TIME DELAY	F1	F2	F3	F4	F5	F6	F7
460	2.5	2.5	2.5	.5	.5	5	NA	
575	2	2	2	.5	.5	5	NA	


WARNING: USE THE SAME FUSE TYPE & RATING

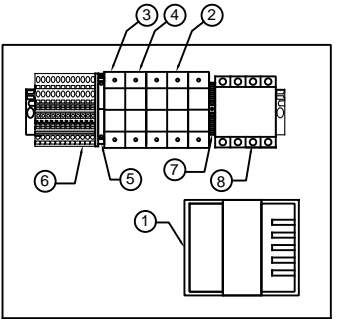

PANEL SCHEMATIC

- ① TRANSFORMER
- ② FAN FUSES F1 / F2 / F3
- ③ PRIMARY FUSE F4
- ④ PRIMARY FUSE F5
- ⑤ SECONDARY FUSE F6
- ⑥ TERMINAL BLOCK
- ⑦ GROUND TERMINAL BLOCK
- ⑧ STARTER CONTACTOR

- E - EMERGENCY STOP
- F1 - FAN FUSE #1
- F2 - FAN FUSE #2
- F3 - FAN FUSE #3
- F4/F5 - TRANSFORMER PRI. FUSE
- F6 - TRANSFORMER SEC. FUSE
- E - EMERGENCY STOP
- P - PRESSURE TRANSDUCER
- S - SOLONOID N.C.
- M - FAN STARTER
- T - TEMPERATURE SENSOR
- TK - FAN THERMAL CONTACT
- RSS - REMOTE START/STOP (FIELD OPTION: INSTALL RSS TO #18 AND #10 TERMINAL BLOCK. INSTALL WIRE FROM #18 TO DI5. ON P18 CHANGE P18.08 FROM 'OFF' TO 'DI REMOTE START'. ON P10 CHANGE P10.12 FROM 'KEYPAD' TO 'EQUIPMENT DI')
- X07 - R7 AND R8 FOR PROGRAMMABLE RELAY OUTPUT FUNCTION

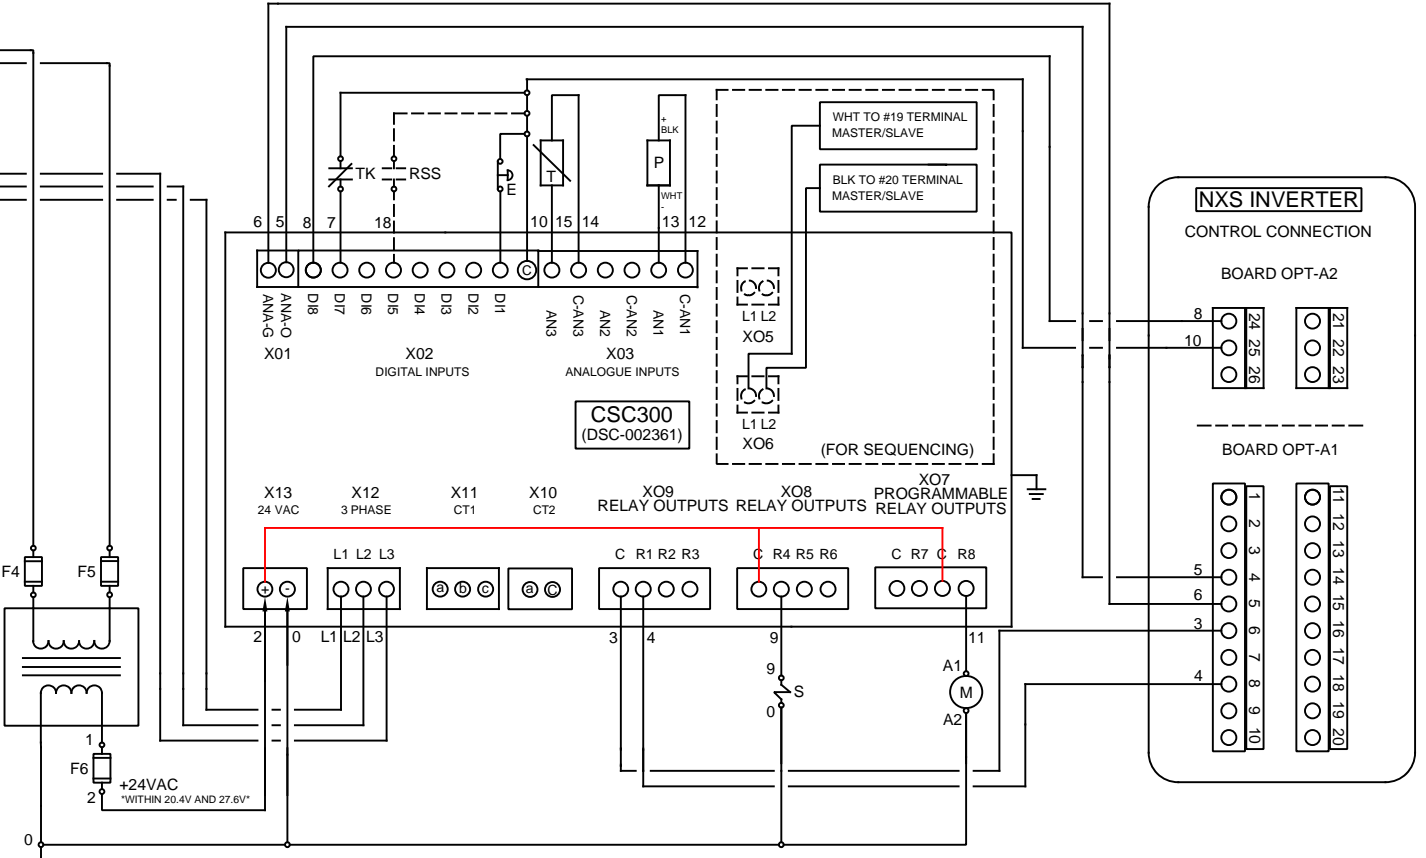

IMPORTANT NOTE: This print is the confidential property of DV SYSTEMS, INC. It is not to be used or reproduced in any manner, nor submitted to other parties for examination without the prior approval of DV SYSTEMS, INC. DV SYSTEMS, INC. is continuously trying to improve its products, specifications subject to change without notice.

FRACTIONAL DIMENSIONS: ±1/32
 DECIMAL DIMENSION: ±.005
 ANGLES: ±1°
 *UNLESS OTHERWISE SPECIFIED



NAME OF PROJECT				DESCRIPTION OF DRAWING			
H50 460V / 575V SCREW COMPRESSOR WITH VARIABLE SPEED CONTROLS				ELECTRICAL SCHEMATICS CSC300 & NXS INVERTER			
DRAWN BY		CHECKED BY		DATE		SCALE	
E.H				05/06/15		N.T.S.	
				DRAWING NO.		SHT NO/REV	
				CSC300-H50-460/575		H	