

ABB MEASUREMENT & ANALYTICS | DATA SHEET

# RHD4000 (Contrac)

Electrical rotary actuator



For continuous control mode, nominal torque 4000 Nm (3000 lbf-ft)

Process optimization thanks to maximum control precision
Maintenance-free up to 10 years
Electrical actuator for continuous positioning, three-point position control, or bus control
Stall-proof without the need for position- or torque-depende shut-off
— Adjustable mechanical limit stops for defined operating rang
Handwheel for emergency operation
Signal and power input only via separate, microprocessor- controlled electronic unit
Power supply 115 V AC or 230 V AC via electronic unit only

### **Brief description**

Compact actuator for the operation of final control elements with rotary movement such as valve flaps, ball valves, etc. The torque is transferred via a lever-type actuator or the actuator is directly coupled to the shaft of the final control element. The actuator is controlled using a Contrac electronic unit. This electronic unit serves as the interface between the actuator and the control system.

During continuous positioning, the electronic unit varies the motor torque steplessly until the actuator force and the control valve force are balanced. High response sensitivity and high positioning accuracy with short positioning time ensure an excellent control quality and a long actuator life.

### Operating principles


The actuator continuously responds to a set point signal. The motor is permanently under voltage (operating mode S9 - 100 % stall-proof according to IEC 60034-1 / EN 60034-1) and gently increases or reduces the torque on the electronic unit in proportion to the  $\Delta Y$  signal (the difference between the Y set point and the Y position signal).

The actuator is not subject to temperature derating, i.e., there are no restrictions, even at the maximum permissible ambient temperature. Where a state of balance exists, the actuator force and process force are equivalent and the actuator keeps the final control element in the required position.

The classification of the 'S9 - 100 % overload protected' Contrac actuator in accordance with IEC 60034-1 / EN 60034-1 by far exceeds the requirements for the highest class, 'continuous modulation, class D' in accordance with EN 15714-2.

The Contrac actuator offers extensive process optimization capabilities thanks to its high-precision and highly dynamic operation.

### **Rotary actuators**

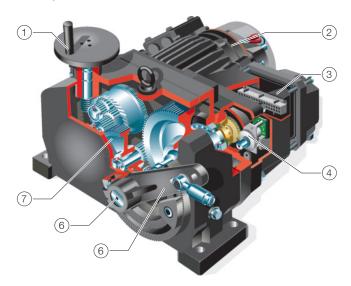

- 1 Handwheel for manual operation
- 5 Position sensor

(2) Motor

- 6 Output shaft
- (3) Sensor connection chamber
- (7) Spur gearing
- 4) Position sensor

Figure 1: Cross-section of a rotary actuator (example)

Rotary actuators are available for nominal actuator torque from 50 to 16000 Nm (40 to 12000 lbf-ft) and feature a common design principle. A motor drives a low-friction, oillubricated spur gearing. At the end of this gearing, a lever mounted on the output drive shaft transmits torque to the final control element via a connecting rod. Since the position sensor is mounted directly on the rear end of the output drive shaft, position feedback is provided without any backlash. This design principle in conjunction with the 3-phase asynchronous motor serves as the basis for the continuous operation mode of the actuator.

Mechanical limit stops, provided on the outside of the gear case, can be adjusted as needed and used to limit the travel path for swing-through valve flaps, for instance.

### ... Brief description

The handwheel offers an optimum level of performance between handwheel forces and rotational speed, owing to the design principle of the differential gearing. Furthermore, the gear train is not interrupted, even though it is possible to adjust the handwheel at any time. This ensures maximum operational reliability. The 3-phase asynchronous motor is equipped with a spring-loaded brake. The brake is energized in automatic mode. In the case of a fault or failure of the supply voltage, the brake will engage via the spring force and lock the control valve in the current position. This ensures reliable 'Fail-Freeze' action. The brake is maintenance-free, regardless of whether the actuator is controlled via analog, bus, or step controller signals.

#### Analog signal and power input

For analog control, the set point entry is received from the control system through a 0 to 20 mA or 4 to 20 mA current value. Signal monitoring is possible. Should the signal leave the pre-defined limits, the actuator will perform the set safety procedure (e. g. 'Lock in last position' or 'Drive to safety position').

The position feedback is also given through a 0 to 20 mA or 4 to 20 mA feedback signal. There are 3 digital inputs and 3 digital outputs available in addition to the analog signal. If a digital input is activated, it will take priority over the set point signal (manual mode takes priority over automatic mode).

The following digital input configurations are possible:

Digital input 1	Digital input 2	Digital input 3
No function	No function	No function
Manual mode /	Travel command in	Travel command
Automatic mode switching	OPEN direction	in CLOSE direction
Rapid traverse	Rapid traverse	Rapid traverse
mode / Automatic	travel command in	travel command in
mode switching	OPEN direction	CLOSE direction
ON / OFF step	Step controller	Step controller
controller activation pulses in OPEN		pulses in CLOSE
	direction	direction
	No function  Manual mode / Automatic mode switching  Rapid traverse mode / Automatic mode switching  ON / OFF step	No function No function  Manual mode / Travel command in OPEN direction switching  Rapid traverse Rapid traverse mode / Automatic travel command in mode switching OPEN direction  ON / OFF step Step controller controller activation pulses in OPEN

The digital output function is freely selectable for each output. The following functions are available:

Function	Description
Ready to operate	Signaling of device status.
Signal end position 0 %	Actuator has reached the 0 % position.
Signal end position 100 %	Actuator has reached the 100 % position.
Signal limit value 1 rising	gWhile the signal level is rising, the actuator has reached the position defined as limit value 1.
Signal limit value 1 falling	While the signal level is falling, the actuator has reached the position defined as limit value 1.
Signal limit value 2 rising	gWhile the signal level is rising, the actuator has reached the position defined as limit value 2.
Signal limit value 2 falling	While the signal level is falling, the actuator has reached the position defined as limit value 2.
Collective failure	Drive function is no longer given. The actuator is no longer available.
Collective alarm	Parameters in the Contrac interface system have adopted values, which make a failure in the near future likely. The actuator remains functional.
Local operation	The actuator is operated via the local control station (ISF)
Rapid traverse +	Actuator is moving at rapid traverse speed in + direction (only for 2-motor version).
Rapid traverse control -direction	Actuator is moving at rapid traverse speed in – direction (only for 2-motor version).

### Step controller operation

In the 'step controller' operating mode the incoming control commands are received as pulses at digital inputs 2 and 3 these are upward-integrated into an internal memory. The memory uses these pulses to generate an 'artificial' internal set point which the actuator then follows. This process is as easy on the control valve and actuator operation as the analog control process.

### Rapid traverse mode

The actuator is operated exactly in the same operating mode as in the analog control mode. On activation of digital inputs 2 or 3, the actuator moves at twice the rated operating speed and half the torque in the corresponding direction. Just before the end position is reached, the actuator travel speed is automatically switched back to the set speed, at which the remaining distance is covered.

#### Speed

Contrac actuators offer different speed adjustments for both directions, independently of actuator torque or actuator force. Furthermore, a speed characteristics curve can be set with three different speed values for each direction.

The actuator speed is steplessly adapted to the rate of change in speed of the set point value. This ensures a highly dynamic and extremely precise control process. In order to preserve the control valve, the actuator speed is automatically reduced before the end position is reached.

### Torque/Force

The torque and actuator force setting options are comparable to the speed setting options. 50 %, 75 % and 100 % of the rated output value can be selected. The electronic unit alters the motor actuation according to the selected value.

### Set point monitoring

The set point can be monitored for compliance with the adjustable limit values. Should the set point exceed the upper limit value or fall below the lower limit value, the actuator will perform the previously defined safety action. 'Lock in current Position' or 'Move to pre-defined safety position' are available as safety actions.

### **Ambient conditions**

#### **Temperature**

Different temperature versions are available, depending on the actuator type.

The power-up period is not subject to derating, i.e. even at the maximum permissible ambient temperature, the actuator ensures maximum control precision and dynamics during a power-up period of 100 %.

#### **Corrosion protection**

Contrac actuators and electronic units have been designed for operation in extreme ambient conditions. They satisfy the requirements of atmospheric corrosivity category C5-I (highly polluted industrial atmospheres) for protection against external corrosion in accordance with DIN EN 15714 (Electric actuators for industrial valves – Basic requirements), and EN ISO 12944-2:1998 (Paints and varnishes. Corrosion protection of steel structures by protective paint systems. Classification of environments).

Electronic cabinet modules satisfy the requirements of category C1 (low pollution) as per EN ISO 12944-2:1998 (Paints and varnishes. Corrosion protection of steel structures by protective paint systems. Classification of environments).

#### Service life

Contrac actuators and electronic units exceed the service life requirements for the highest class D, 'continuous modulation', as per DIN EN 15714 (Electric actuators for industrial valves – Basic requirements). The actuators remain maintenance-free for up to 10 years under 'normal' load.

### Communication

The PROFIBUS DP®, PROFIBUS DP®/V1 or HART® communication protocols are available for digital communication.

#### **PROFIBUS®**

PROFIBUS DP® is an international, open field bus protocol which has been standardized in the field bus standard EN 50170. On a cyclic basis, the master reads the input information from the slaves and writes the output information to the slaves. In addition to this cyclic data transfer of the process representation (e.g. setpoint and actual value), Profibus DP also provides powerful functions for diagnostics and commissioning. PROFIBUS DP/V1 additionally offers the acyclic transfer of data for the configuration of slaves, for example. Data traffic is monitored through the monitoring functions on the master and slave sides. In addition to PROFIBUS® data transfer, ABB Contrac actuators provide two configurable binary outputs to for example signal that the end position has been reached. The two configurable digital outputs can be used independently of the bus communication.

#### **HART®**

Contrac actuators also offer the option of using the HART® communication protocol for configuration and parameterization while operation is in progress. HART®-FSK communication enables simultaneous analog set point transmission and digital communication without additional installation. The HART signal is modulated on to the 4 to 20 mA analog set point signal. The HART® protocol works with Frequency Shift Keying (FSK) technology, based on the Bell 202 communication standard.

#### **DTM**

The DTM (Device Type Manager) for Contrac actuators is based on FDT / DTM technology (FDT 1.2 / 1.2.1) and can either be integrated into a control system or loaded on a PC with DAT200 Asset Vision Basic. This allows you to work with the same user interface in the commissioning phase, during operation, and for servicing tasks, involving monitoring the device, setting parameters, and reading out data.

Communication is based on HART® protocol or PROFIBUS® communication. Reading out data from the device has no effect on the operation in progress. Newly set parameters are saved in the non-volatile memory directly upon download to the device, and become active immediately.

#### EDD

Similar to DTM, the EDD (Electronic Device Description) provides the option of configuration and parameterization of the device through HART® communication by using a handheld terminal or an EDD integrated in the system.

# **Specification**

### **Control actuator**

	RHD4000 (Contrac)	
Operating mode	S9 – 100%; stall-proof acc. to IEC 60034-1/EN 60034-1	
IP rating	IP 66 acc. to IEC 60529/EN 60529	
	NEMA 4X acc. to CAN/CSA22.2 No. 94	
Humidity	≤ 95 % annual average; condensation not permitted	
Ambient temperature	-10 to 65 °C (15 to 150 °F)	
	-30 to 50 °C (-20 to 125 °F)	
	−1 to 85 °C (30 to 185 °F)*	
Transport and storage temperature	-40 to 70 °C (-40 to 160 °F)	
Long-term storage temperature	-30 to 40 °C (-22 to 104 °F)	
Mounting position	any position; preferably IMB 3 acc. to IEC 60034-7 / EN 60034-7	
Coating	2-layer component epoxy (RAL 9005, black)	
Anti-condensation heater	Motor winding: directly from electronic unit.	
	Signal space: separate heating resistor; separate power supply or power feed from Contrac electronic	
	unit	
Electrical connection	Plug connection with crimp snap-in contacts or screw terminals	
	Connection cable for electronic unit – actuator available as an option (see ordering information for	
	electronic unit)	
Power supply for motor and sensors	Via Contrac electronic unit only	

 $<sup>^{*}</sup>$   $\,$  85 °C / 185 °F- design not available for all RHD variants.

	RHD4000-10	RHD4000-40	
Nominal torque	4000 Nm (2950 lbf-ft), adjustable to 0.5	4000 Nm (2950 lbf-ft), adjustable to 0.5, 0.75 or 1 × nominal torque	
Starting torque	1.2 × nominal torque (break-away torque	1.2 × nominal torque (break-away torque in end positions for short time 2 × nominal torque)	
Rated time for 90°; adjustable	10 to 900 s	40 to 900 s	
Rated operating speed, adjustable	9.0 to 0.1°/s	2.25 to 0.1°/s	
Operating angle	31 3 1 7	Typically 90° (min. 35°; max. 270°), with lever and limit stops the mechanical limits in accordance with operating instruction should be complied with.	
Weight	Approx. 290 kg (639 lb)	Approx. 283 kg (624 lb)	
Associated electronic unit	For field mounting: EBN861	For field mounting: EBN853	
	For rack installation: EBS862	For rack installation: EBS852	
Motor	MC 100 BA	MC 90 BA	
Sensors	Position transmitter and temperature s	Position transmitter and temperature sensor always available	

# ... Specification

### **Electronic unit**

#### Note

 $\label{lem:decomposition} \textbf{Detailed information on separate electronic units can be found in the corresponding data sheets.}$ 

### **Power supply**

RHD(E)4000				
Supply voltage	115 V AC (94 to 130 V) or 230 V AC (190 to 260 V); 47.5 to 63 Hz; single-phase			
Current consumption at the electronic unit [A]		I <sub>max</sub> at 115 V	I <sub>max</sub> at 230 V	I <sub>pos</sub> (115 + 230 V):
(AC 115 V / AC 230 V)	RHD(E)4000-40	5.8 A	2.7 A	approx. 40 to 50 % of I <sub>max</sub>
	RHD(E)4000-10	-	10.0 A	
External fuse	16 A; time-lag			

### Communication

Conventional communication		
Analog input	0 / 4 to 20 mA; internal load EBN853, EBS852 300 $\Omega$	
Analog output	0 / 4 to 20 mA, electrically isolated, max. load 500 $\Omega$	
3 digital inputs, 1 to 3	Digital 0: −3 to 5 V or open, electrically isolated	
	Digital 1: 12 to 35 V, electrically isolated	
3 digital outputs, 1 to 3	Potential-free relay contact, max. 60 V, 150 mA	
Digital communication	RS232 for commissioning and service, with optional FSK / HART® or PROFIBUS DP®	
Default settings	See Table Conventional communication on page 10.	
Voltage output U <sub>V</sub>	24 V, 15 mA, electrically isolated, for scanning external contacts, or similar applications	
Connection for transmitter (optional)	Supply for two-wire transmitter with activated process controller in Contrac	
Individual settings	See data sheet 'DS/CONTRAC/SETTING' or available upon request.	

PNO ID no.	0×9655 Actuators with DP/V0 communication (cyclic data traffic)	
	0×09EC Actuators with DP/V1 communication (cyclic and acyclic data traffic)	
Communication protocol	PROFIBUS PA® Profile V3.0 Class B in accordance with IEC 50170 / EN 50170 (DIN 19245)	
Bus cable	Twisted, shielded copper wire acc. to IEC 50170 / EN 50170	
Interface	EIA-485 (RS485) acc. to IEC 50170 / EN 50170	
Permissible baud rates	93.75 Kbit/s	
	187.5 Kbit/s	
	500 Kbit/s	
	1500 Kbit/s	
	Automatic baud rate detection	
Bus address	0 to 126, default address 126	
	Set Slave Address service is supported	
Bus termination	Connectable active bus termination. Power supply from electronic unit	
Block types	1 analog input function block	
	1 transducer block	
	1 physical block	
Failsafe	Failsafe function is supported.	
	Configurable function for downtime of bus communication	
	Lock in last position	
	Drive to safety position	
	Adjust with last effective set point	
	Adjustable time delay	
Modules for cyclic communication	8 standards-compliant modules and 3 manufacturer-specific modules are available.*	
	SP (Short)	
	SP (Long)	
	RCAS_IN+RCAS_OUT	
	SP+READBACK+POS_D	
	SP+CHECKBACK	
	SP+READBACK+POS_D+CHECKBACK	
	RCAS_IN+RCAS_OUT+CHECKBACK	
	SP+RCAS_IN+READBACK+RCAS_OUT+POS_D+CHECKBACK	
	STANDARD	
	SP+RB+MESSEING	
	SP+RB+ENL_DIAG	
Acyclic communication	Full parameterization and configurability via Master Class 2 and DTM	
Default settings	See Table <b>PROFIBUS DP® communication</b> on page 10.	
Digital outputs 1 and 2	In addition to the PROFIBUS®-communication, there are 2 digital outputs.	
	Potential-free relay contact, max. 60 V, 150 mA	
	Default setting:	
	Digital output 1 End position signal 0 %	
	Digital output 2 End position signal 100 %	
Individual settings	See data sheet 'DS/CONTRAC/SETTING' or available upon request.	

 $<sup>^{\</sup>star}$  A full description of communication modules can be found in parameterization and configuration instructions 45/68-10

## ... Specification

### **Delivery state**

The standard delivery scope includes metric cable entry threads with IP66 seal plugs. Optional NPT and PG adapters are available. The individual actuator configuration may vary from the standard setup above. This information can be displayed via the user interface. Unless otherwise specified by the user, the electronic units are delivered with the following standard configuration:

Conventional communication			
Parameter	Setting		
Function selection	Positioner, parameter: set point		
Set point function	Analog set point		
Set point range	4 to 20 mA		
Set point characteristic	Linear; set point = position value		
Actual value range	4 to 20 mA		
Nominal torque / rated force in	100 %		
±direction Automatic speed in ±direction:	100 %		
<u> </u>			
Action in 0 % / 100 % end	Keep leak-tight with nominal torque /		
position	rated force		
Digital inputs	Digital input 1 Manual / Automatic		
	switching,		
	Digital input 2 / 3 Travel command $\pm$		
Digital outputs	Digital output 1 ready for operation /		
	error message,		
	Digital output 2 / 3 end position		
	signaling 0 % / 100 %		
Brake Away Function	Deactivated		
Shut-off function	Deactivated		
Positioning loop monitoring	Deactivated		
Set point monitoring	Deactivated		
Alarm Type	Deactivated		
Action after restoration of powerSwitch to Automatic			
Working range of actuator	Not set		

PROFIBUS DP® communication	
Parameter	Setting
Function selection	Positioner, parameter: set point
Set point function	Digital
Set point range	4 to 20 mA
Set point characteristic	Linear; set point = position value
Actual value range	Digital
Nominal torque / rated force in ±direction	100 %
Automatic speed in ±direction:	100 %
Action in 0 % / 100 % end position	Keep leak-tight with nominal torque / rated force
Digital outputs	Digital output 1 / 2 end position signal 0 % / 100 %
Brake Away Function	Deactivated
Shut-off function	Deactivated
Positioning loop monitoring	Deactivated
Communication monitoring	PROFIBUS DP® / V0: Activated
	Lock in last position
	PROFIBUS DP® / V1:
	Activated
	After delay time has elapsed (standard
	configuration 5 s)
	Lock in last position
Alarm Type	Deactivated
Action after restoration of power	Switch to Automatic
Working range of actuator	Not set

### **Electrical connections**

### Wire cross-sectional areas

#### **Control actuator**

Crimp pins	
Motor / brake / heater	max. 1.5 mm² (16 AWG)
Signals	max. 0.5 mm <sup>2</sup> (20 AWG)
Contact surface	Gold-plated

Screw terminals (optional	)	
Motor / brake / heater	max. 2.5 mm <sup>2</sup> (14 AWG)	
Signals	max. 2.5 mm <sup>2</sup> (14 AWG)	
Contact surface	Motor / brake / signals:	Gold-plated
	Heater:	Silver-plated

#### **Electronic unit**

EBN853 – Screw termina	ıls
Motor/brake	rigid: 0.2 to 6 mm² (24 to 10 AWG)
	flexible: 0.2 to 4 mm <sup>2</sup> (24 to 12 AWG)
Mains	rigid: 0.5 to 6 mm <sup>2</sup> (20 to 10 AWG)
	flexible: 0.5 to 4 mm <sup>2</sup> (20 to 12 AWG)
Signals	rigid: 0.5 to 4 mm <sup>2</sup> (20 to 12 AWG)
	flexible: 0.5 to 2.5 mm <sup>2</sup> (20 to 14 AWG)

EBS852 – Clamping connection					
Suited for cable Ø Terminals for cor					
		cross-section			
Mains cable	13 mm (0.51 in)	max. 4 mm <sup>2</sup> (12 AWG)			
Signal cable (DCS)	8 mm (0.31 in)	max. 1.5 mm <sup>2</sup> (16 AWG)			
Transmitter (option)	8 mm (0.31 in)	max. 1.5 mm <sup>2</sup> (16 AWG)			
Motor cable	13 mm (0.51 in)	max. 4 mm <sup>2</sup> (12 AWG)			
Sensor cable	8 mm (0.31 in)	max. 1.5 mm <sup>2</sup> (16 AWG)			

### Cable glands

The actuators and electronic units are supplied without cable glands. Suited cable glands must be installed on site.

Tap holes for cable glands					
	metric	optional adapters for			
Signals	M20 × 1.5 (2 ×)	PG 16 (2 ×)	NPT ½ in (2 ×)		
Motor	M25 × 1.5 (1 ×)	PG 21 (1 ×)	NPT ¾ in (1 ×)		

<sup>\*</sup> Adapter for PG or NPT thread must be ordered separately

### Selection of suited connection cables

Please observe the following information when selecting cables:

- Use shielded cables for the motor/brake cable, the sensor cable, and the signal cable to the control system/controller.
- Connect the shielding of the motor/brake cable and the sensor cable on both sides (to the actuator and to the Contrac electronic unit).


### ... Electrical connections

### Electronic unit EBS853 (Contrac) / EBS861 (Contrac)

#### Analog / Digital

#### Note

The electrical connection is provided by a universal plug on the actuator and the screw terminals on the electronic unit.

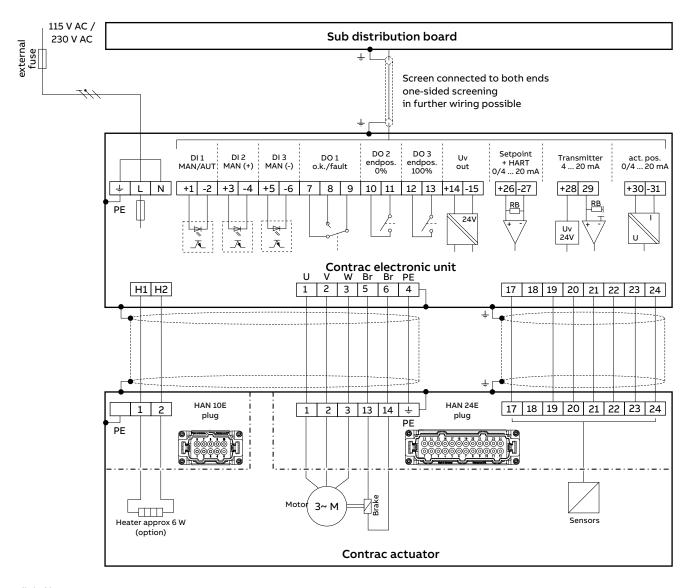


BE = digital input BA = digital output

Figure 2: Control via analog input 0/4 to 20 mA, HART® communication or digital inputs

#### **PROFIBUS DP®**

#### Note

The electrical connection is provided by a universal plug on the actuator and the screw terminals on the electronic unit.

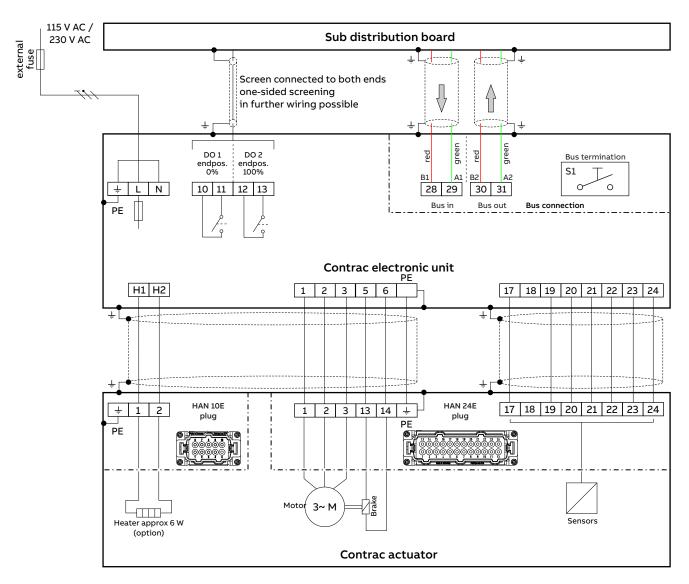

BA = digital output

Figure 3: Control via fieldbus PROFIBUS DP®


### ... Electrical connections

### Electronic unit EBS852 (Contrac) / EBS862 (Contrac)

#### Analog / Digital

#### Note

- · The electrical connection is provided by a universal plug on the actuator and the screw terminals on the electronic unit.
- If you are using a separate heat supply, the heater must be protected with a 2 to 6 A medium time-lag fuse (e.g. NEOZED D01 E14).

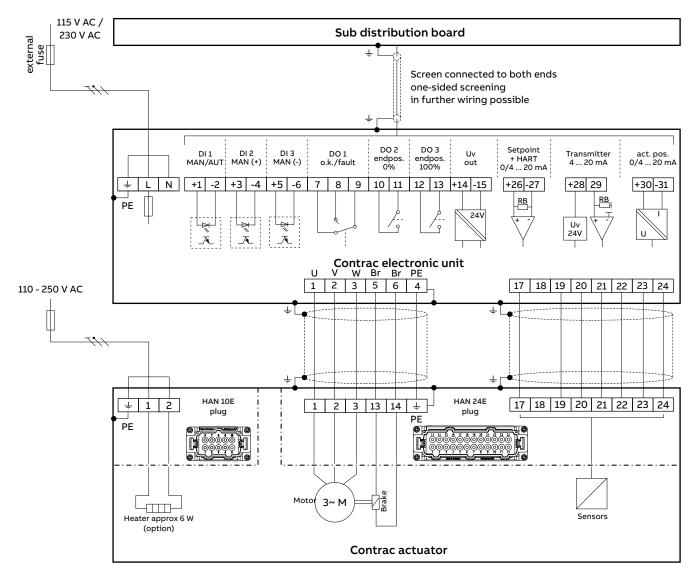


BE = digital input BA = digital output

Figure 4: Control via analog input 0/4 to 20 mA, HART® communication or digital inputs

### **Dimensions**

### **Control actuator**

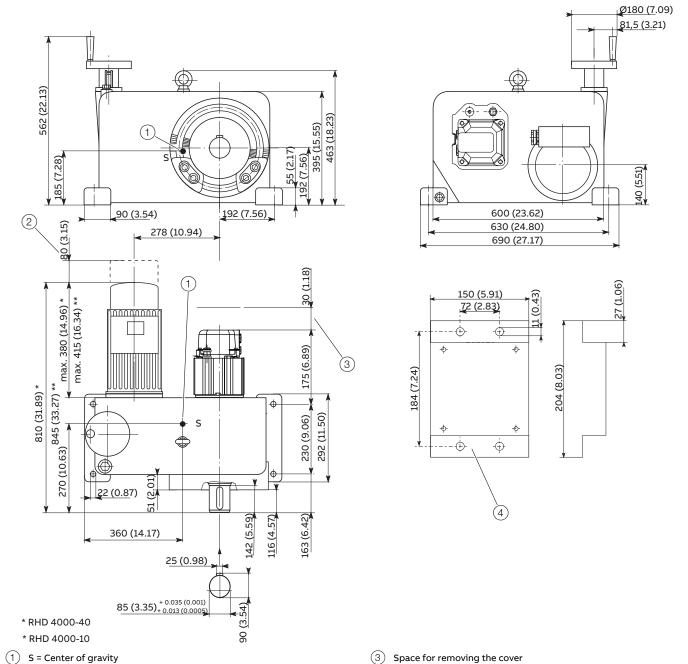


Removal dimension


4 Plug holder (not to scale)

Figure 5: Dimensions in mm (in)

### ... Dimensions

### Lever

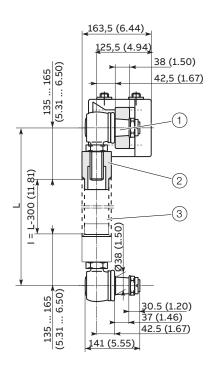

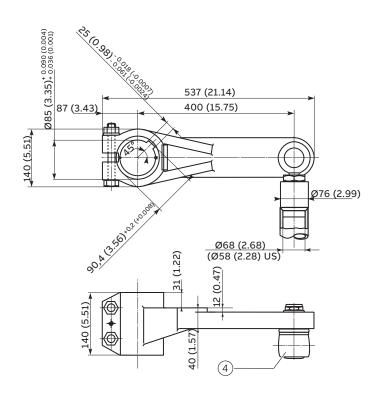

- 1 Cone 1:10
- 2) Welding bushings are included in delivery
- 3 Connection pipe 2 ½ in DIN EN 10255 / ISO 65 or 2 ½ in schedule 80 pipe. Size 'L' acc. to requirements. The pipe is not included in delivery
- 4 Angular deflection of ball and socket joint: Pointing towards the actuator max. 3°; pointing away from the actuator max. 10°

Figure 6: Dimensions in mm (in)

# **Ordering Information**

### **RHD4000**

Basic model	V68181	xxxx	XXX	XXX	XX
RHD4000 Rotary Actuator, rated torque 4000 Nm (3000 ft-lbs) (adjustable to 50 % / 75 % / 100 %)					
Rated Pos. Speed					
2.25°/s (adjustable to 2.25 to 0.1°/s), only for RHD4000-40		0116			
9.0°/s (adjustable to 9.0 to 0.1°/s), only for RHD4000-10		0117			
Mechanical Connection					
Shaft with key			370		
Lever set, standard design (consists of lever, 2 ball-and-socket joints and 2 welding bushings)			496		
Lever set, US design (consists of lever, 2 ball-and-socket joints and 2 US welding bushings)			374		
Electrical Connection					
Plug (24-pole) complete, crimped				277	
Plug (24-pole) complete, terminals				278	
Plug bottom part covered				279*	
Ambient Temperature Range					
−10 to 65 °C (15 to 150 °F)					34
-30 to 50 °C (-22 to 125 °F)					34

 $<sup>^{\</sup>star}$   $\;$  Female plug with cables to be ordered with electronic unit

# ... Ordering Information

### Additional ordering information RHD4000

RHD4000 Rotary Actuator	xxx	X							
Electrical Connection Thread									
Set NPT adapter (junction metric / NPT thread)	680								
Set PG adapter (junction metric / PG thread)	681								
Anti-condensation Heater									
Anti-condensation heater		360							
Identification on Data Label									
Alphanumeric, max. 32 characters			294						
Data Label with US Units									
Data label with US units				253					
Accessories: Plug Cover									
Cover for male plug (24 pole)					337				
Accessories: Plug Holder									
Plug holder						338			
Factory Certificate 2.1 acc. to EN 10204									
Factory certificate 2.1 acc. EN 10204							291		
Certificate 3.1 acc. to EN 10204									
Certificate 3.1 acc. EN 10204								292	
Operating Instruction									
German									Z
English									Z
Portuguese									Z
Italian									Z
French									Z





### **Trademarks**

HART is a registered trademark of FieldComm Group, Austin, Texas, USA PROFIBUS and PROFIBUS DP are registered trademarks of PROFIBUS & PROFINET International (PI)



### **ABB Limited Measurement & Analytics**

Howard Road, St. Neots Cambridgeshire, PE19 8EU UK

Tel: +44 (0)870 600 6122 Fax: +44 (0)1480 213 339

Email: enquiries.mp.uk@gb.abb.com

### **ABB Automation Products GmbH Measurement & Analytics**

Schillerstr. 72 32425 Minden Germany

Tel: +49 571 830-0 Fax: +49 571 830-1806

abb.com/actuators

### ABB Inc.

### Measurement & Analytics

125 E. County Line Road Warminster, PA 18974

USA

Tel: +1 215 674 6000 Fax: +1 215 674 7183

We reserve the right to make technical changes or modify the contents of this document without  $\frac{1}{2}$ prior notice. With regard to purchase orders, the agreed particulars shall prevail.

ABB does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of ABB.

Copyright© 2018 ABB All rights reserved